
Dual Color DMX512+RF Controller


Important: Read All Instructions Prior to Installation

Function introduction

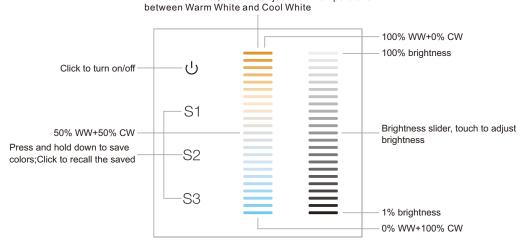

Dual color slider, touch to adjust color temperature

Front side

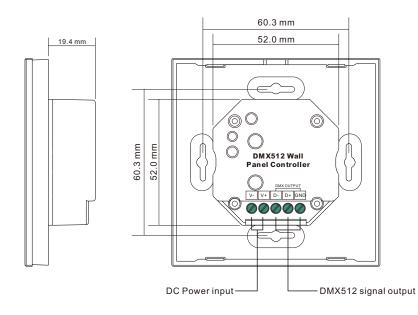

Product Data

09.34BDE.04713

Output Signal	DMX512 signal
Power Supply	12-24VDC
Power consumption	< 20 mA
Operating temperature	0-40°C
Relative humidity	8% to 80%
Dimensions	86x86x29.1mm

Touch sensitive


- Glass interface(white & black)
- Standard DMX512 Signal output
- Can Send RF signal, control RF receivers
- Radio frequency: 869.5MHz
- Control CCT color
- Control 1 zone/area
- Waterproof grade: IP20

Safety & Warnings

• DO NOT install with power applied to device.

• DO NOT expose the device to moisture.

Wiring diagram

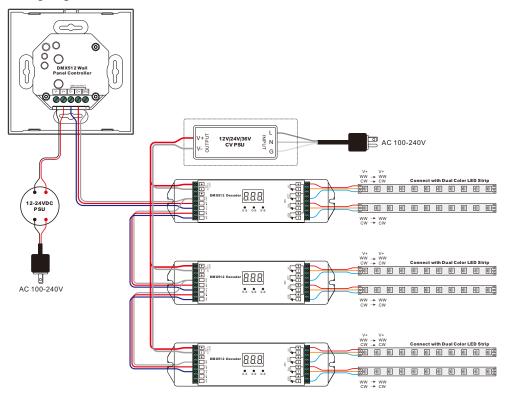


Set DMX Address

This DMX master controller can control many DMX decoders, please set all decoders' address as 001.

Pair with RF receiver

1. Do wiring the wall panel & RF receiver according to wiring diagram (please refer to the instruction of RF receiver that you would like to pair with)

2. Power on, then touch the button \bigcirc to turn on the controller, indicator of the controller turned blue

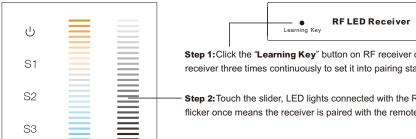

Step 1: Click the "Learning Key" button on RF receiver or re-power on the receiver three times continuously to set it into pairing status

Step 2: Touch the slider, LED lights connected with the RF receiver flicker once means the receiver is paired with the remote successfully.

Installation

