CDW DMX512 Controller


09.2201E.04046

Product Data

W	CE	F©	
---	----	----	--


Important: Read All Instructions Prior to Installation

Function introduction

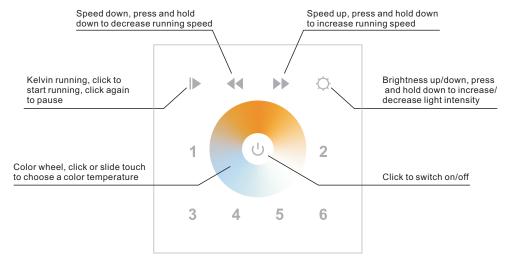

1 2 3 4 5 6 Save 6 colors, press and hold down to save the color/effect, click to recall the saved

Front side

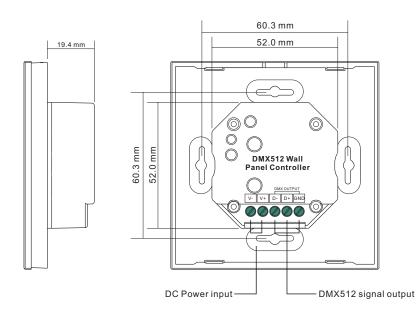


Output Signal	DMX512 signal	
Power Supply	12-24VDC	
Power consumption	< 20 mA	
Operating temperature	0-40°C	
Relative humidity	8% to 80%	
Dimensions	86x86x29.1mm	

Safety & Warnings

• DO NOT install with power applied to device.

• DO NOT expose the device to moisture.

Wiring diagram

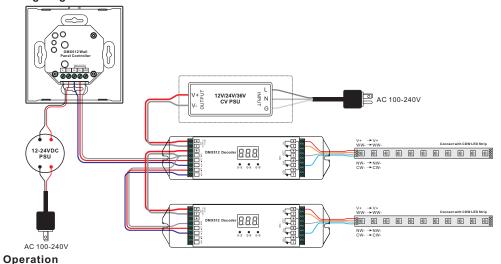

Touch sensitive

Glass interface(white & black)Standard DMX512 Signal output

• Waterproof grade: IP20

· Control CDW color(all white color)

1. Set DMX Address

Set all DMX Decoder as DMX Address 001

2. Default setting colors

Press and hold down \bigcirc key to restore to default setting colors as follows:

- 100% Warm white 2 50% warm white +50% cool white
- ③ 100% Natural white 4
- 4 50%Natural white +50% cool white ⑥ 50% Cool white +50% warm white
- 5 100% Cool white 6 50% Cool white

3. Save color

1

1)Touch color wheel 💽 to choose the color

2)Press and hold down a target number over 3 seconds until LED light connected with the DMX decoder flashes, the color is saved successfully, which will cover the default setting colors.

4. Recall the saved colors

Turn on the DMX master controller and click any of numbers of 1, 2, 3, 4, 5 and 6 to recall the saved colors.



