






Important: Read All Instructions Prior to Installation

## **Function introduction**

DC Power input

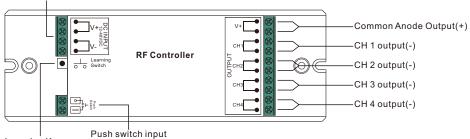

Learning Key:

Paring with RF remote

#### **Product Data**

| Input<br>Voltage | Output<br>Current           | Output<br>Power                      | Connector<br>Current Rating | Wire Size                             | Remarks          | Size(LxWxH) |
|------------------|-----------------------------|--------------------------------------|-----------------------------|---------------------------------------|------------------|-------------|
| 12-48VDC         | 4x8A@12-36VDC<br>4x4A@48VDC | 4x(96-288)W@12-36VDC<br>4x192W@48VDC | Max. 20A                    | 0.05-3.3mm <sup>2</sup><br>(12-30AWG) | Constant voltage | 170x59x29mm |

- Radio Frequency: 868/915/434mhz
- Waterproof grade: IP20

## Safety & Warnings

- DO NOT install with power applied to device.
- DO NOT expose the device to moisture.


## Pair/delete the pairing with RF remote

- 1.Do wiring according to connection diagram.
- 2. Pair RF Receiver with RF remote: please refer to the instruction of the remote that you would like to pair with.
- 3. Delete the pairing:
- (1)Wire up the RF receiver correctly, power on.
- (2)Press and hold down the "Learning Key" button on receiver for over 3 seconds until the connected light flashes, which means well deleted.

### PUSH DIM:

When connected to Push Switch, click push switch for switch ON/OFF, hold push switch to dim up/down the brightness

#### **Product Dimension**

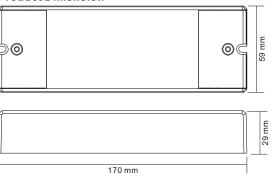

# Wiring Diagram

1) When total load of each receiver is not over 20A

