


RGBW DMX512 Controller

09.02812.04153




Important: Read All Instructions Prior to Installation

Function introduction

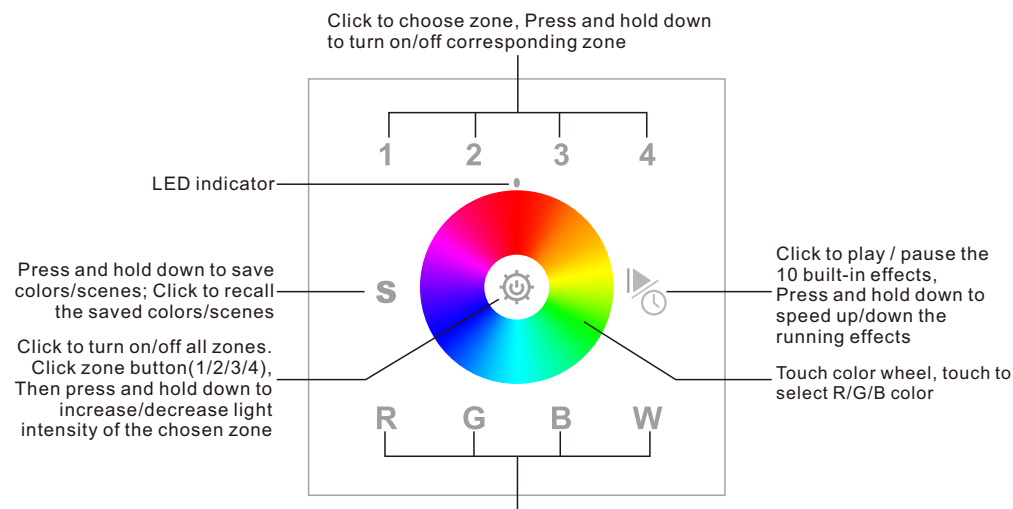

R/G/B/W 4channels:Click to turn off/on the channel
Press and hold down to increase/decrease light intensity of each channel

Front side

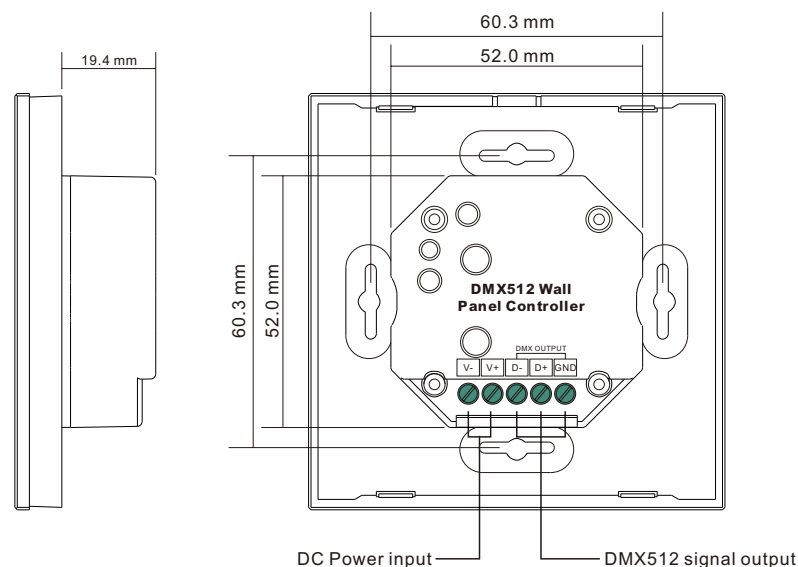

Back side

Product Data


Output Signal	DMX512 signal
Power Supply	12-24VDC
Power consumption	< 20 mA
Operating temperature	0-40°C
Relative humidity	8% to 80%
Dimensions	86x86x29.1mm

- Touch sensitive
- Glass interface(white & black)
- Standard DMX512 Signal output
- Control RGBW color
- Control 4 zones synchronously and separately
- Waterproof grade: IP20

Safety & Warnings


- DO NOT install with power applied to device.
- DO NOT expose the device to moisture.

Wiring diagram

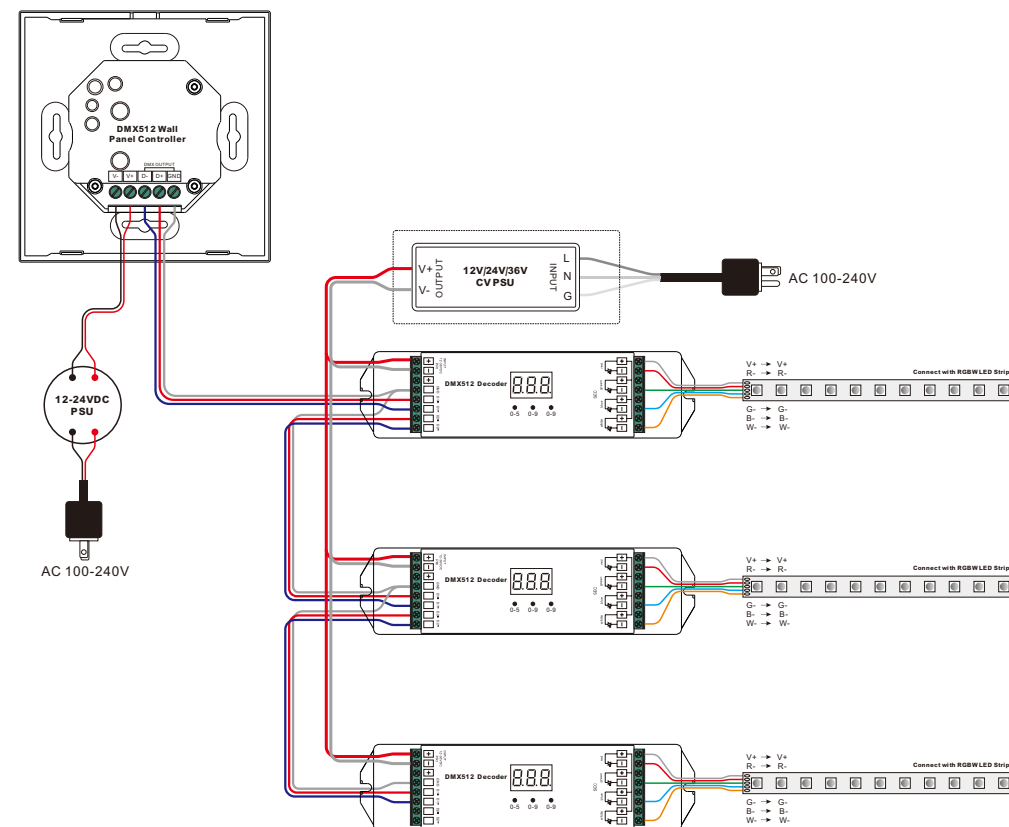


Set DMX Address

This DMX master controller controls 4 zones of DMX decoders by setting DMX decoders' address as follows:
DMX decoders with address 001 will be controlled by zone 1,
DMX decoders with address 005 will be controlled by zone 2,
DMX decoders with address 009 will be controlled by zone 3,
DMX decoders with address 013 will be controlled by zone 4.

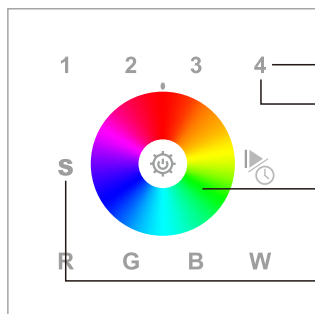

Save color/scene/mode

- Step 1:** Choose and click one or multiple paired zone numbers(e.g. zone 4)
- Step 4:** Immediately click any number of 1-4(e.g. 4)(here the numbers mean 4 scenes can be saved for the selected zone) , LED lights connected with the DMX decoder flicker once means the color/scene was saved successfully.
- Step 2:** Touch the color wheel or click the other buttons to select the scene you like
- Step 3:** Press and hold down button **S** until the LED indicator flashes once

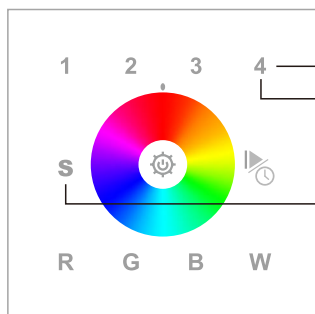

Recall the saved colors/scenes

- Step 1:** Choose and click one or multiple paired zone numbers(e.g. zone 4)
- Step 3:** Click any numbers 1-4(e.g. 4)(here the numbers means the 4 scenes saved for selected zone) to recall the saved scene
- Step 2:** Click button **S**

Installation

