

 
 
 
RF Single Color Wall Mounted Controller

09.280AU.04181



Important: Read All Instructions Prior to Installation

Function introduction

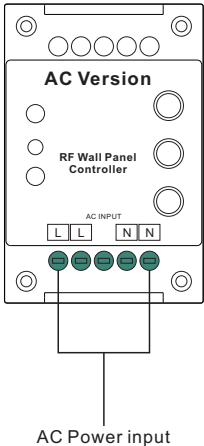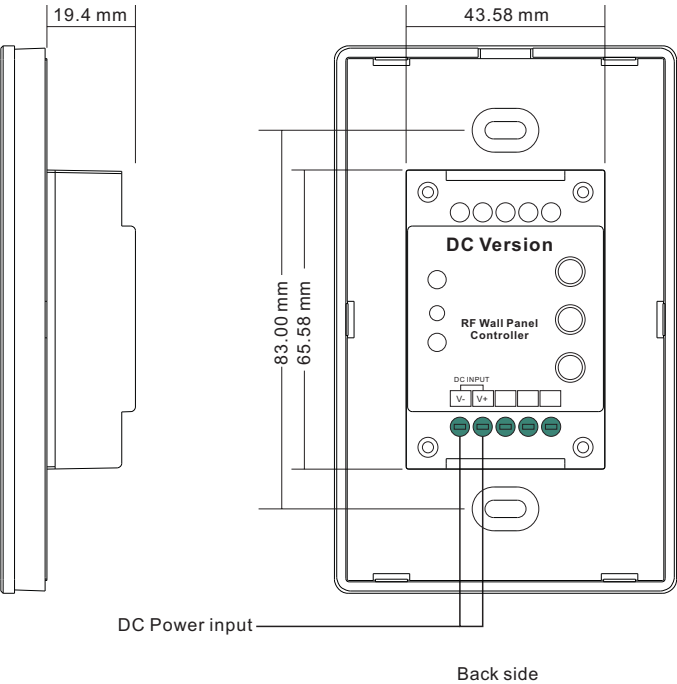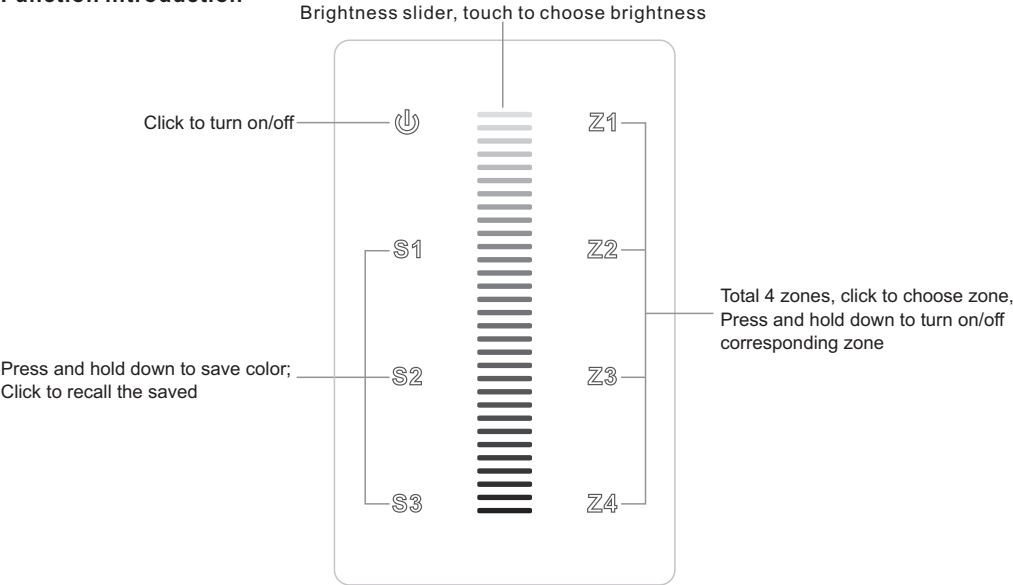

Product Data



| | DC Version | AC Version |
|-----------------------|---------------|---------------|
| Output Signal | RF signal | RF signal |
| Power Supply | 12-24VDC | 100-240VAC |
| Power consumption | 20 mA | 20 mA |
| Operating temperature | 0-40°C | 0-40°C |
| Relative humidity | 8% to 80% | 8% to 80% |
| Dimensions | 75x120x29.1mm | 75x120x29.1mm |

- Touch sensitive
- Glass interface(white & black)
- Compatible with all universal series RF receivers, radio frequency: 916.5MHz
- Control single color
- Control 4 zones synchronously and separately
- Waterproof grade: IP20


Safety & Warnings


- DO NOT install with power applied to device.
- DO NOT expose the device to moisture.

  Wiring diagram

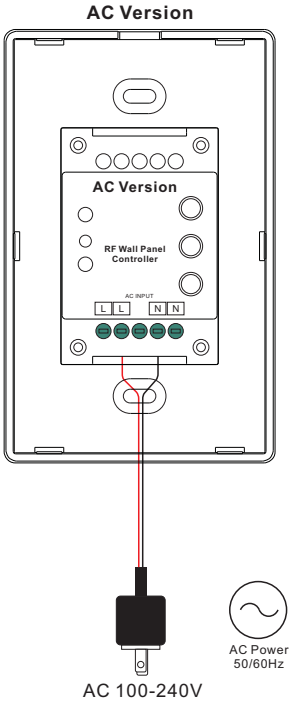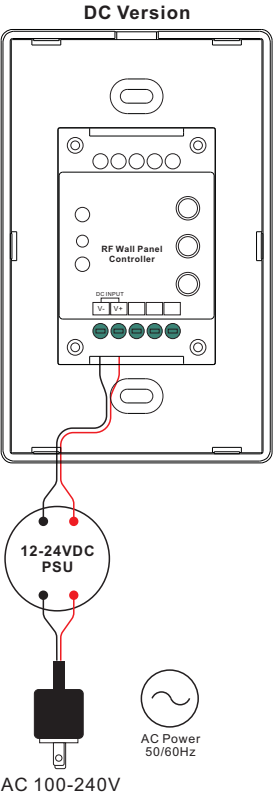

Operation

 1. Do wiring the wall panel & RF receiver according to wiring diagram (please refer to the instruction of RF receiver that you would like to pair with)
2. Power on, then touch the button  to turn on the controller, indicator of the controller turned blue

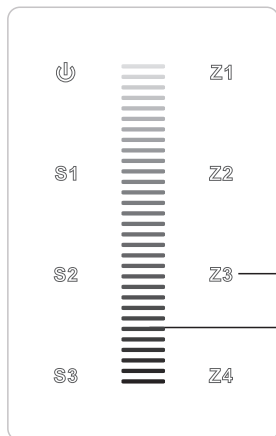


Pair with RF receiver



Step 1: Click the "Learning Key" button on RF receiver or re-power on the receiver three times continuously to set it into pairing status

Step 2: Choose and click a zone number(e.g. zone 3)

 Step 3: Touch the brightness slider, LED lights connected with the RF receiver flicker once means the receiver is paired with zone 4 successfully.

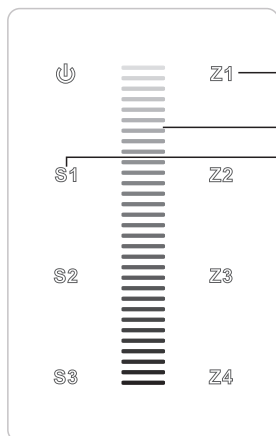


Save color/scene/mode

Step 1: Choose and click one or multiple paired zone numbers(e.g. zone 1)

Step 2: Touch the brightness slider to select the scene you like

 Step 3: Press and hold any scene buttons of **S1-S3**(e.g. **S1**) , LED lights connected with the RF receiver flicker once means the color/scene was saved successfully.

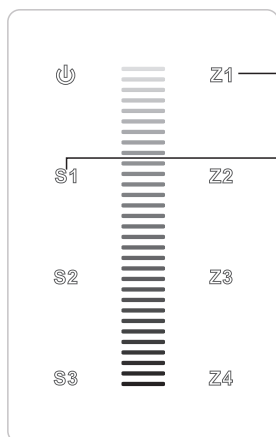

Recall the saved colors/scenes

Step 1: Choose and click one or multiple paired zone numbers(e.g. zone 1)

Step 2: Click any scene buttons of **S1-S3**(e.g. **S1**) to recall the saved scene

Installation

