


Important: Read All Instructions Prior to Installation

Function introduction



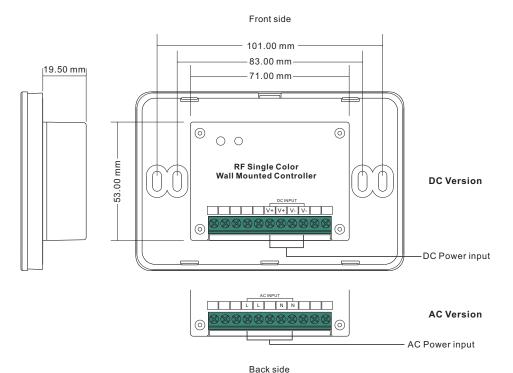

Product Data


	DC Version	AC Version
Output Signal	RF signal	RF signal
Power Supply	12-24VDC	100-240VAC
Power consumption	20 mA	20 mA
Operating temperature	0-40°C	0-40°C
Relative humidity	8% to 80%	8% to 80%
Dimensions	120x80x29.1mm	120x80x29.1mm


- Touch sensitive
- · Glass interface(white & black)
- · Control CCT color
- · Control 4 zones synchronously and separately
- Compatible with all universal series RF receivers, radio frequency: 869.5/434MHz
- Waterproof grade: IP20

Safety & Warnings

- DO NOT install with power applied to device.
- DO NOT expose the device to moisture.

Wiring diagram

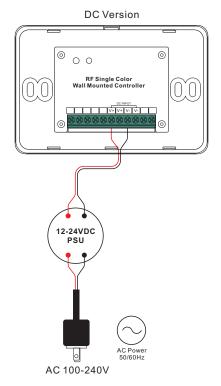


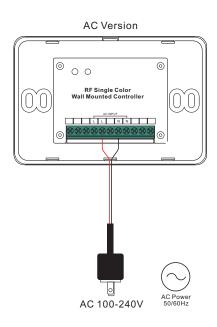

Operation

- 1. Do wiring the wall panel & RF receiver according to wiring diagram (please refer to the instruction of RF receiver that you would like to pair with)
- 2. Power on, then touch the button 🖐 to turn on the controller, indicator of the controller turned blue

Pair with RF receiver

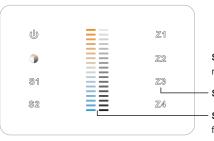


RF LED Receiver Learning Key

Step 1:Click the "Learning Key" button on RF receiver or re-power on the receiver three times continuously to set it into pairing status

Step 2:Choose and click a zone number(e.g. zone 3)

Step 3:Touch the slider, LED lights connected with the RF receiver flicker once means the receiver is paired with zone 3 successfully.

Save color/scene/mode

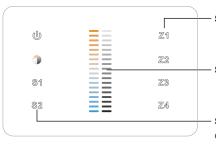


Step 1:Choose and click one or multiple paired zone numbers(e.g. zone 1)

Step 2:Touch the brightness slider to select the scene you like

Step 3:Press and hold any scene buttons of \$1/\$2(e.g. \$2), LED lights connected with the RF receiver flicker once means the color/scene was saved successfully.

Recall the saved colors/scenes

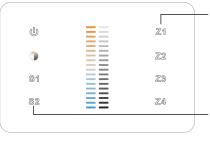

Step 1:Choose and click one or multiple paired zone numbers(e.g. zone 1)

Step 2:Click any scene buttons of S1/S2(e.g. S2) to recall the saved scene

Installation

