



# RF Single Color Wall Mounted Controller

09.283T2.04213



**Important:** Read All Instructions Prior to Installation

## Function introduction

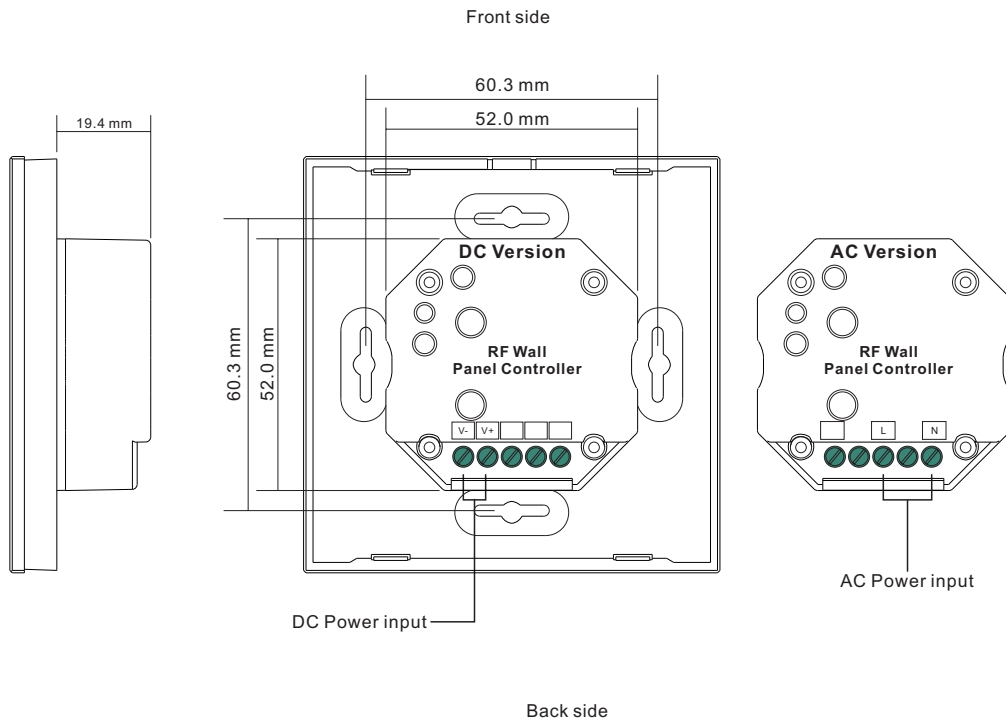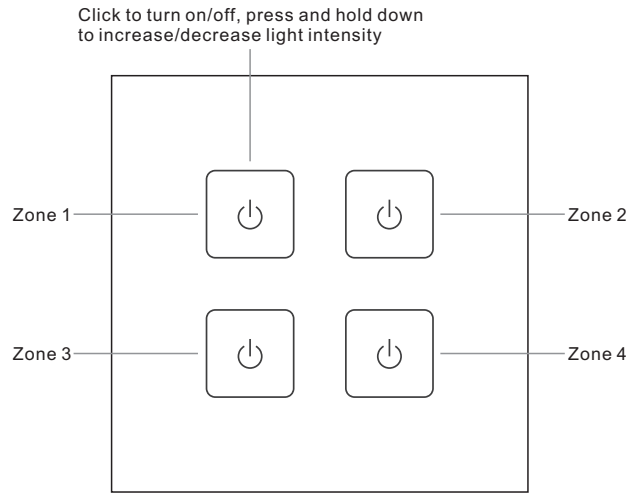

## Product Data


|                       | DC Version   | AC Version   |
|-----------------------|--------------|--------------|
| Output Signal         | RF signal    | RF signal    |
| Power Supply          | 12-24VDC     | 100-240VAC   |
| Power consumption     | 200 mA       | 15 mA        |
| Operating temperature | 0-40°C       | 0-40°C       |
| Relative humidity     | 8% to 80%    | 8% to 80%    |
| Dimensions            | 86x86x29.1mm | 86x86x29.1mm |

- Touch sensitive
- Glass interface(white & black)
- Compatible with all universal series RF receivers, radio frequency: 868/869.5/434MHz
- Control single color
- Control 4 zone of RF receiver synchronously and separately
- Back lighting for finding in the dark
- Waterproof grade: Ip20


## Safety & Warnings

- DO NOT install with power applied to device.
- DO NOT expose the device to moisture.

## Wiring diagram

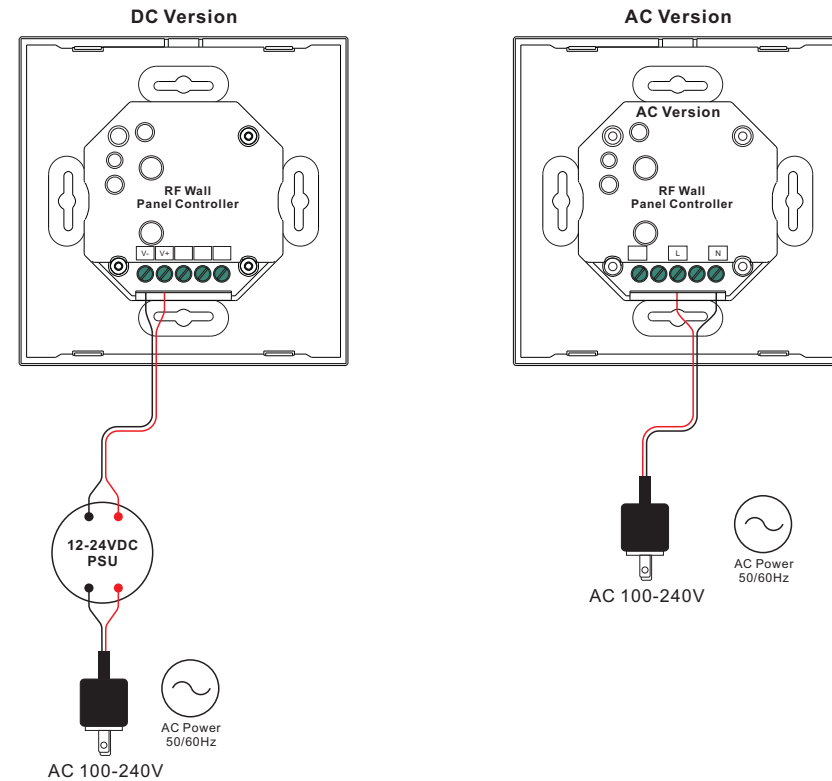


## Pair with RF receiver

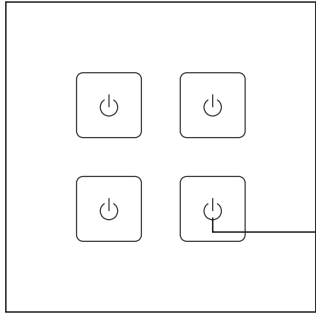


**Step 1:** Do wiring the wall panel & RF receiver according to wiring diagram (please refer to the instruction of RF receiver that you would like to pair with)



**Step 2:** Click the "Learning Key" button on RF receiver or re-power on the receiver three times continuously to set it into pairing status

**Step 3:** Choose one zone and touch  button of the zone (e.g. zone 4), LED lights connected with the RF receiver flicker once means the receiver is paired with zone 4 successfully.

## Installation

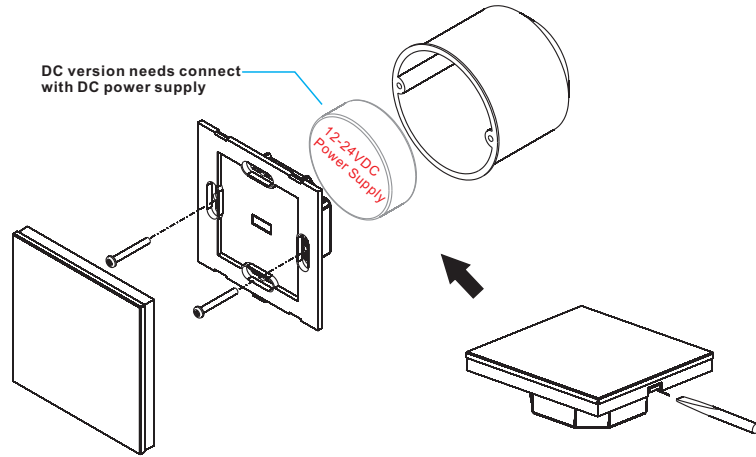

DC version needs connect with DC power supply

12-24VDC  
Power Supply