





Important: Read All Instructions Prior to Installation


Function introduction

Rotate the knob counterclockwise:

- 1. Decrease light intensity from 100% to 1%(brightness mode).
- 2. Change color temperature from warm white to cold white (dual color mode)


Rotate the knob clockwise:

- 1. Increase light intensity from 1% to 100%(brightness mode).
- 2. Change color temperature from cold white to warm white (dual color mode)

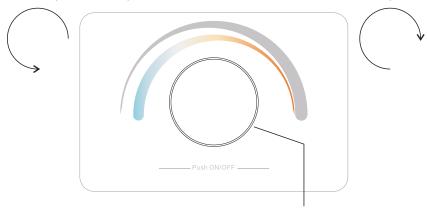

Click the knob to switch ON/OFF. Press and hold down to adjust brightness to 100%. Double click the knob to switch between dual color mode and brightness mode.

Front side

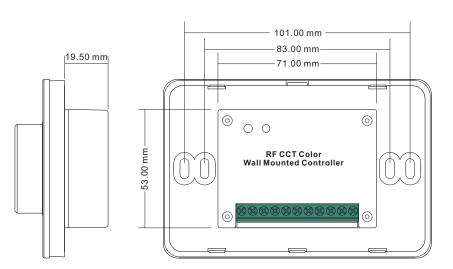

Product Data


Output Signal	RF signal
Power Supply	3V(CR2032)
Power consumption	10 mA
Operating temperature	0-40°C
Relative humidity	8% to 80%
Dimensions	120x80x41.6mm

- · Rotation sensitive
- · Glass interface(white & black)
- · Compatible with all universal series
- RF receiversradio frequency: 868/869.5/434MHz
- Control CCT color
- · Control 1 zone of RF receiver
- Waterproof grade: Ip20

Safety & Warnings

- DO NOT install with power applied to device.
- DO NOT expose the device to moisture.

Pair with RF receiver

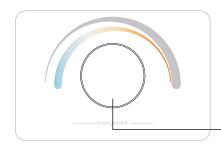

Step 1:Do wiring the wall panel & RF receiver according to wiring diagram (please refer to the instruction of RF receiver that you would like to pair with)



Step 2:Click the "Learning Key" button on RF receiver to set it into pairing

Step 3:Rotate or click the knob, LED lights connected with the RF receiver flicker once means the receiver is paired with the remote successfully.

Note: one receiver can be paired with max 8 remote controls.

Installation

