

RF RGB Wall Mounted Controller

09.286RI.04278




Important: Read All Instructions Prior to Installation

Function introduction


Rotate the knob counterclockwise:
1. Decrease light intensity from 100% to 1%(brightness mode).
2. Change RGB color (RGB color mode)

Rotate the knob clockwise:
1. Increase light intensity from 1% to 100%(brightness mode).
2. Change RGB color (RGB color mode)

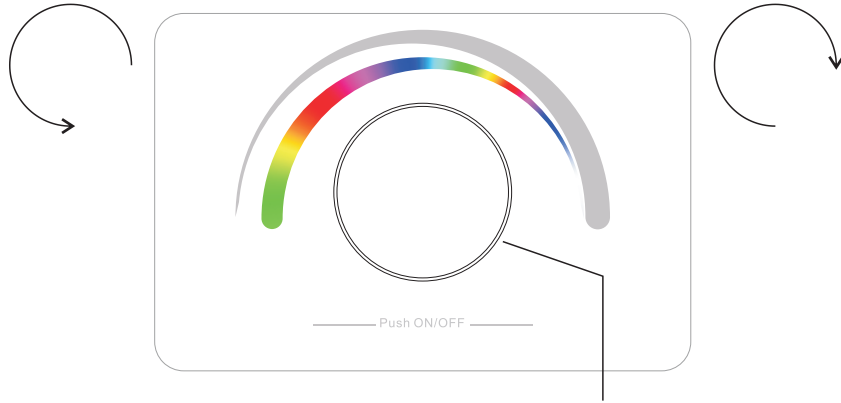

Click the knob to switch ON/OFF. Press and hold down to adjust brightness to 100%. Double click the knob to switch between RGB color mode and brightness mode.

Front side

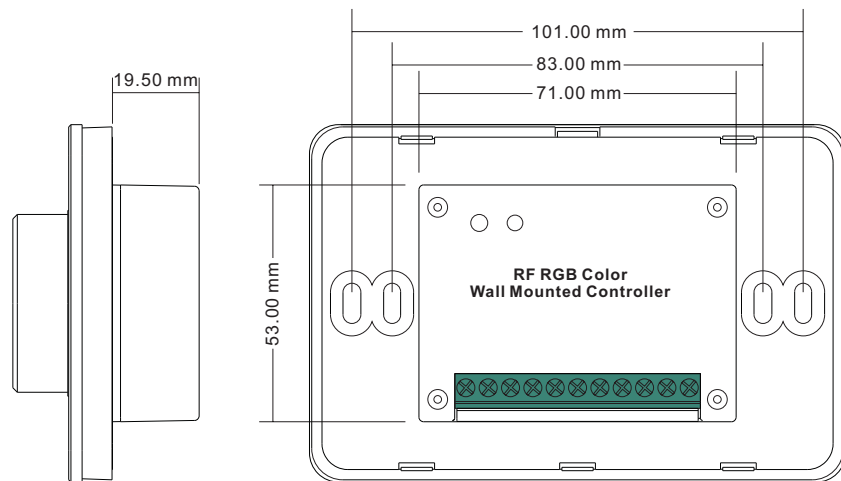

Back side

Product Data


Output Signal	RF signal
Power Supply	3V(CR2032)
Power consumption	10 mA
Operating temperature	0-40°C
Relative humidity	8% to 80%
Dimensions	120x80x41.6mm

- Rotation sensitive
- Glass interface(white & black)
- Compatible with all universal series RF receivers
- Radio frequency: 868/869.5/434MHz
- Control RGB color
- Control 1 zone of RF receiver
- Waterproof grade: Ip20

Safety & Warnings

- DO NOT install with power applied to device.
- DO NOT expose the device to moisture.

Pair with RF receiver

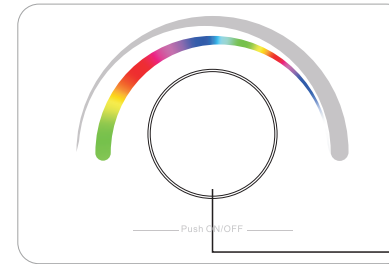

Step 1:Do wiring the RF receiver according to wiring diagram (please refer to the instruction of RF receiver that you would like to pair with)



Step 2:Click the "Learning Key" button on RF receiver to set it into pairing status

Step 3:Rotate or click the knob, LED lights connected with the RF receiver flicker once means the receiver is paired with the remote successfully.

Installation

