

RF RGB Wall Mounted Controller



09.286RU.04223



Important: Read All Instructions Prior to Installation


Function introduction

Rotate the knob counterclockwise:
1. Decrease light intensity from 100% to 1%(brightness mode).
2. Change RGB color (RGB color mode)

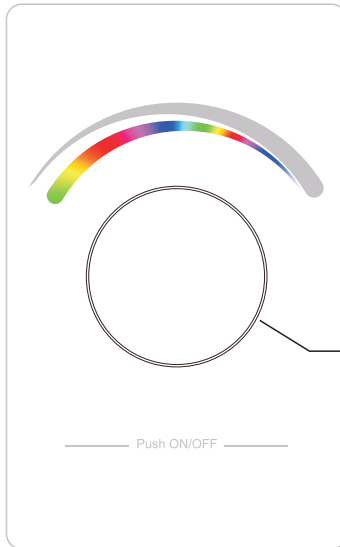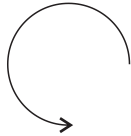


Front side

Rotate the knob clockwise:
1. Increase light intensity from 1% to 100%(brightness mode).
2. Change RGB color (RGB color mode)

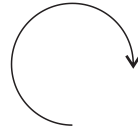

Click the knob to switch ON/OFF.
Press and hold down to adjust brightness to 100%.
Double click the knob to switch between RGB color mode and brightness mode.

Push ON/OFF

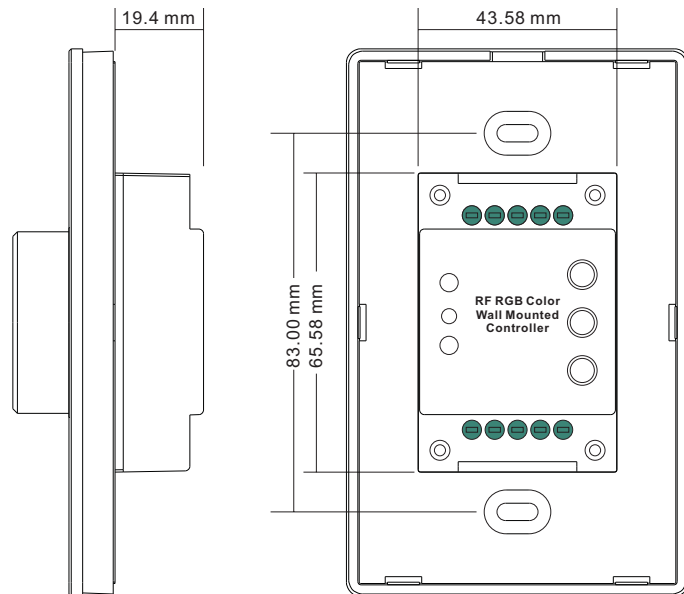

Back side

Product Data

Output Signal	RF signal
Power Supply	3V(CR2032)
Power consumption	10 mA
Operating temperature	0-40°C
Relative humidity	8% to 80%
Dimensions	75x120x41.6mm

- Rotation sensitive
- Glass interface(white & black)
- Compatible with all universal series RF receivers
- Radio frequency: 916.5MHz
- Control RGB color
- Control 1 zone of RF receiver
- Waterproof grade: Ip20

Safety & Warnings

- DO NOT install with power applied to device.
- DO NOT expose the device to moisture.

Pair with RF receiver



Step 1: Do wiring the RF receiver according to wiring diagram(please refer to the instruction of RF receiver that you would like to pair with).



Step 2: Click the "Learning Key" button on RF receiver to set it into pairing status

Step 3: Rotate or click the knob, LED lights connected with the RF receiver flicker once means the receiver is paired with the remote successfully.

Note: one receiver can be paired with max 8 remote controls.

Installation

