RF RGB Remote Controller


70010132






Important: Read All Instructions Prior to Installation

Function introduction

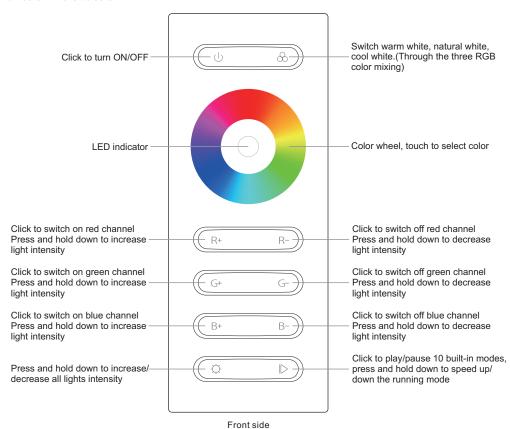

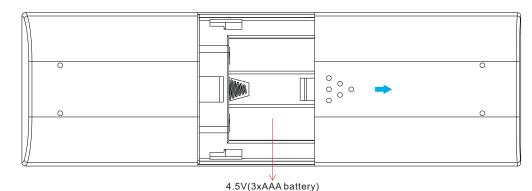

Back side

Product Data


Output	RF signal	
Operation Frequency	868/915/434MHz	
Power Supply	4.5V(3xAAA battery)	
Operating temperature	0-40°C	
Relative humidity	8% to 80%	
Dimensions	120x48x17.6mm	

- . Control 1 zone of RF receiver
- · RGB color controller
- · Compatible with universal serie RF receiver
- 1 receiver can be paired by max 8 different remote controls.
- · Waterproof grade: IP20

Safety & Warnings

- This device contains AAA batteries that shall be stored and disposed properly.
- DO NOT expose the device to moisture.

Pair with RF receiver

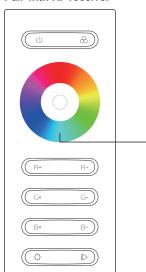

Step 1:Do wiring the RF receiver according to wiring diagram(please refer to the instruction of RF receiver that you would like to pair with.



Step 2:Click the "RF Code Key" button on RF receiver to set it into pairing status

Step 3:Touch the color wheel, LED lights connected with the RF receiver flicker once means the receiver is paired with the remote successfully.


Note: one receiver can be paired with max 8 remote controls.

RF Receiver



Important: Read All Instructions Prior to Installation

Function introduction

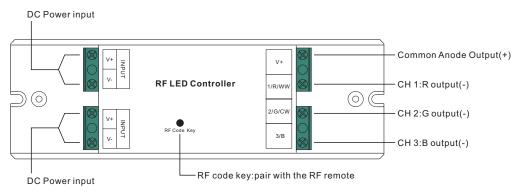


Product Data

Input Voltage	Output Current	Output Power	Remarks	Size(LxWxH)	● Radio Frequency : 868mhz
12-24VDC	3x5A	3x(60-120)W	Constant voltage	145x46.5x16mm	 Waterproof grade: IP20

Safety & Warnings

- DO NOT install with power applied to device.
- DO NOT expose the device to moisture.

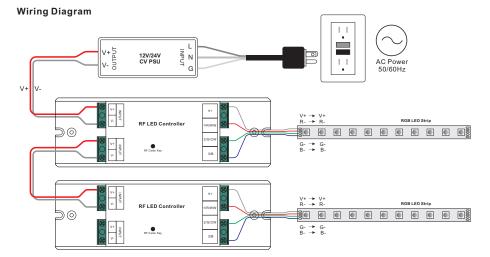

Pair/delete the pairing with RF remote

- 1.Do wiring according to connection diagram.
- 2. Pair RF Receiver with RF remote: please refer to the instruction of the remote that you would like to pair with.
- 3. Delete the pairing:
- (1) Wire up the RF receiver correctly, power on.
- (2)Press and hold down the "RF Code Key" button on receiver for over 3 seconds until the connected light flashes, which means well deleted.