RF RGBW Wall Mounted Controller


09.2853W.04749





Important: Read All Instructions Prior to Installation

Function introduction

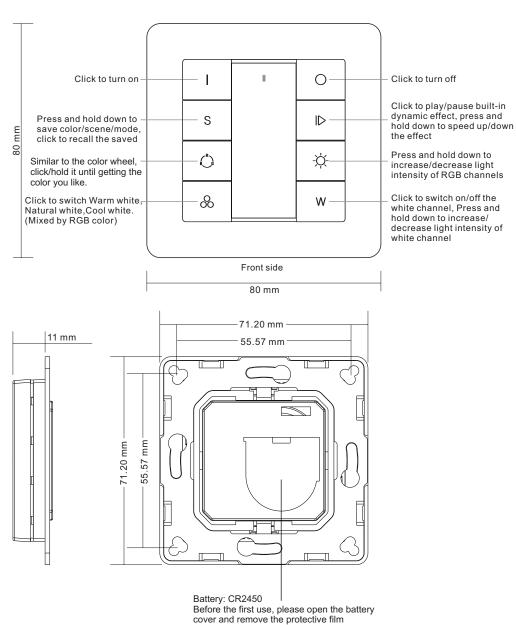

Product Data


Output	RF signal
Operation Frequency	869.5/434MHz
Power Supply	3V(1xCR2450 battery)
Operating temperature	0-40°C
Relative humidity	8% to 80%
Dimensions	80x80x13.6mm

- · Control 1 zone of RF receiver
- · Single color controller
- · Compatible with all universal series RF receivers
- 1 receiver can be paired by max 8 different remote controls.
- · Waterproof grade: IP20

Safety & Warnings

- This device contains a button lithium battery that shall be stored and disposed properly.
- DO NOT expose the device to moisture.

Pair with RF receiver

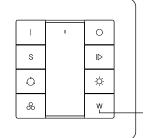

Step 1:Do wiring the RF receiver according to wiring diagram(please refer to the instruction of RF receiver that you would like to pair with.




Step 2:Click the "Learning Key" button on RF receiver or re-power on the receiver three times continuously to set it into pairing status

Step 3:Click any button of the remote(e.g. button W), LED lights connected with the RF receiver flicker once means the receiver is paired with the remote successfully.


Note: one receiver can be paired with max 8 remote controls.

Installation


1.Remove battery insulator

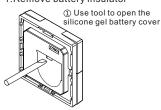




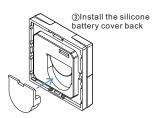


2.Install the controller to wall(2 methods)

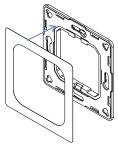

Method 1:Stick 3M glue on the back of the bracket and then stick the bracket to the wall

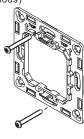

Method 2: Screw the bracket to the wall

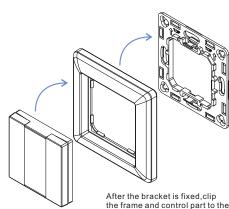

bracket in sequence

Back side

The key part of this controller is a universal, standard size design switch element that can be integrated in numerous frames by different manufactures as below list:

BEKER	S1, B1, B3, B7 glass
GIRA	Standard55, E2, Event, Esprit
JUNG	A500, Aplus
MERTEN	M-smart, M-Arc, M-Plan