
15W 2CH Zigbee NFC Enabled LED Driver(Constant Current)



Important: Read All Instructions Prior to Installation

Function introduction

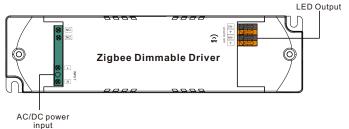

Product Data

	LED Channel	2						
	DC Voltage	6-42V, Max.50V						
	Current	100-700mA via NFC setting; Min.current gear lower to 0.1mA,Default 350mA						
Output	Current Accuracy	±3%(±1%@Certain full load) @ full load						
	Rated Power	Max. 15W						
	Voltage Range	220-240VAC/220-240VDC						
	Absolute Voltage Range	196-264VAC/196-264VDC						
	Frequency Range	0/50/60Hz						
	Power Factor (Typ.)	> 0.96 @ 230VAC Full load*						
	Total Harmonic Distortion	THD ≤ 12% (@ full load / 230VAC)*						
Input	Efficiency (Typ.)	> 77% @ 230VAC full load*						
	AC Current (Typ.)	0.1A Max.						
	Inrush Current (Typ.)	Max. 3.96A at 230VAC; 90µs duration						
	Leakage Current	< 5mA/230VAC						
	Standby Power Consumption	< 0.5W						
	Anti Surge	L-N:2KV						
	Dimming Interface	Zigbee						
Control	Dimming Range	0.01%-100%@ Max current						
Control	Dimming Method	Amplitude/CCR dimming						
	Dimming Curve	Linear/ Logarithmic optional						

	Short Circuit	Yes, remove the fault conditions and re-power the device						
Protection	Over Current	Yes, remove the fault conditions and re-power the device						
	Over Temperature	Yes, remove the fault conditions and re-power the device						
	Working Temp.	-25°C ~ +45°C						
Environment	Max. Case Temp.	TC=85°C (Ta="45°C")						
Environment	Working Humidity	10% ~ 95% RH non-condensing						
	Storage Temp. & Humidity	-40°C ~ +80°C, 10% ~ 95% RH						
	Safety Standards	EN61347-1, EN61347-2-13, GB/T 19510.1-2023, GB/T 19510.213-2023						
	Withstand Voltage	I/P-O/P: 3.75KVAC						
Safety & EMC	Isolation Resistance	I/P-O/P: 100M Ohms / 500VDC / 25°C / 70% RH						
	EMC Emission	EN55015, EN61000-3-2, EN61000-3-3, GB 17625.1-2022, GB/T 17743-2						
	EMC Immunity	EN61547, EN61000-4-2,3,4,5,6,8,11						
O4h	MTBF	191350H, MIL-HDBK-217F @ 230VAC full load and 25°C ambient temperature						
Others	Dimension	135x35x20mm (L*W*H)						
	Warranty	5 Years						
		` '						

^{*:} PF/THD/Eff shall be different per different testing setup and equipment.

- Dimmable LED driver, ZigBee device based on ZigBee 3.0 protocol
- Dimmable LED driver. Max. output power 15W
- 100-700mA current selectable via NFC program tool. Min.current gear lower to 0.1mA
- Dimming curve/Power on state/Soft start/Soft off via NFC program tool.
- \bullet Class ${1\hspace{-.2em} \hbox{\it I}}$ power supply, full isolated plastic case
- High power factor and efficiency
- Able to On/Off and control LED lighting luminaries' brightness and color temperature
- Amplitude/CCR dimming, smooth and deep dimming
- ZigBee end device that supports Touchlink commissioning
- Can directly pair to a compatible ZigBee remote via Touchlink
- Supports zigbee green power and can bind max. 20 zigbee green power switches
- Compatible with universal ZigBee gateway products
- Waterproof grade: IP20, suitable for indoor LED lighting applications
- 5 years warranty

Safety & Warnings

- DO NOT install with power applied to the device.
- DO NOT expose the device to moisture.

Operation--Zigbee Network


- 1.Do wiring according to connection diagram correctly.
- 2. This ZigBee device is a wireless receiver that communicates with a variety of ZigBee compatible systems. This receiver receives and is controlled by wireless radio signals from the compatible ZigBee system.

3. Zigbee Network Pairing through Coordinator or Hub (Added to a Zigbee Network)

Step 1: Remove the device from previous zigbee network if it has already been added to, otherwise pairing will fail

Step 2: From your ZigBee Controller or hub interface, choose to add lighting device and enter Pairing mode as instructed by the controller.


Step 3: power on the device, it will be set into network pairing mode (connected light flashes twice slowly), the network pairing mode will last until the device is added to a zigbee network.

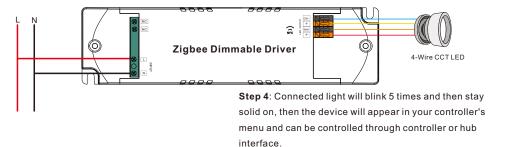

4. TouchLink to a Zigbee Remote

Step 1: Method 1: re-power on the device 4 times to start Touchlink commissioning immediately, 180S timeout, repeat the operation.


Method 2: If the device is already added to a network, it will be set into Touchlink commissioning immediately, 180S timeout. Once timeout, re-power on the device to set it into touchlink commissioning again.

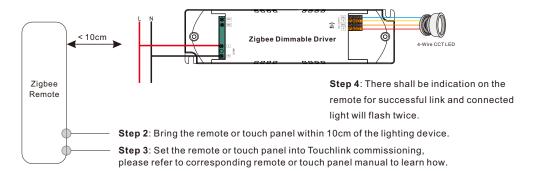

Note: 1) Directly TouchLink (both not added to a ZigBee network), each device can link with 1 remote.


- 2) TouchLink after both added to a ZigBee network, each device can link with max. 30 remotes.
- 3) To control by both gateway and remote, add remote and device to network first then TouchLink.
- 4) After TouchLink, the device can be controlled by the linked remotes.

5. Removed from a Zigbee Network through Coordinator or Hub Interface

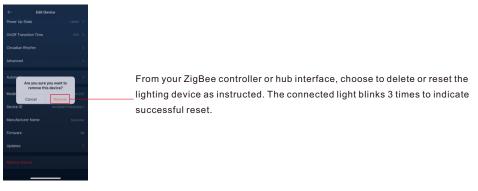

6. Factory Reset Manually

 Step 1: Enable Pairing via NFC App or re-power on the device for 5 times continuously.




Step 2: Connected light will blink 3 times to indicate successful reset.

Note: 1) If the device is already at factory default setting, there is no indication when factory reset again .

2) All configuration parameters will be reset after the device is reset or removed from the network.


7. Learning to a Zigbee Green Power Switch

Step 1: Re-power on the device 4 times to start Learning to GP switch mode (connected light flashes twice), 180 seconds timeout, repeat the operation.

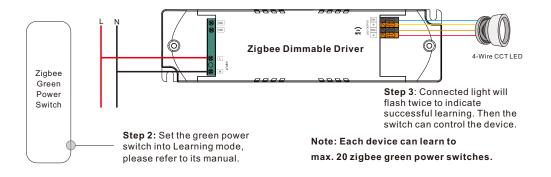

8. Delete Learning to a Zigbee Green Power Switch

Step 1: Re-power on the device 3 times to start delete Learning to GP switch mode (connected light flashes slowly), 180 seconds timeout, repeat the operation.

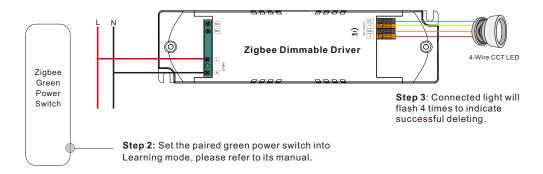

9. ZigBee Clusters the device supports are as follows:

Input Clusters

• 0x0000: Basic • 0x0003: Identify • 0x0004: Groups • 0x0005: Scenes • 0x0006: On/off

• 0x0008: Level Control • 0x0300: Color Control • 0x0b05: Diagnostics

Output Clusters


• 0x0019: OTA

10. OTA


The device supports firmware updating through OTA, and will acquire new firmware from zigbee controller or hub every 10 minutes automatically.

Wiring Diagram

With CCT LED luminarie

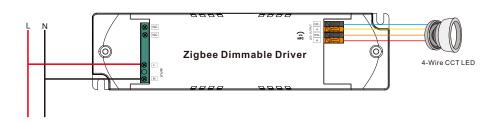

Product Dimension

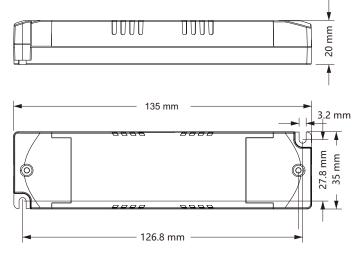

With NFC Programming devices

Note

- 1) Do wiring according to the wiring diagram.
- 2) Recommend setting parameters without power-on devices .
- 2) Please make sure your mobile phone has NFC function and enable it .


Working with "SR NFC Tool" APP

Step 1: Download the APP (searching "SR NFC Tool" from App Store and Google Playstore) .
Then open the APP .




- Note: 1. Please Make sure that you have enabled NFC function with your mobile phone/ tablet
 - 2. Please Make sure that the "NFC position" is matched.
 - 3. Please do not power on the device before setting.
 - 4. If you can't download "SR NFC Tool". Please contact with us.


Step 2: Add device, and name it as you wish.

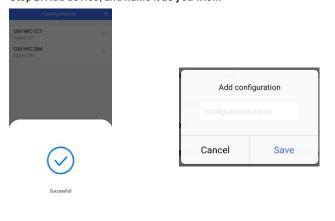



Step 3: Unlock device, enter parameters configuring page.

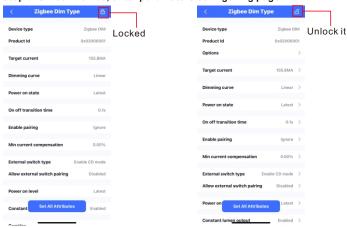


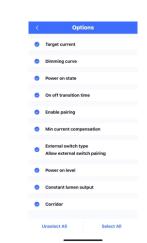


Note: 1. You have to unlock the device then do some settings

2. Only when the corresponding function is selected, the function interface will be displayed.

Step 4: Few parameter interface, you can choose the setting based on your requirements.

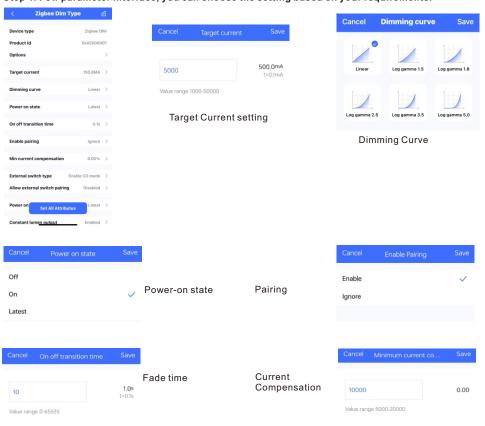

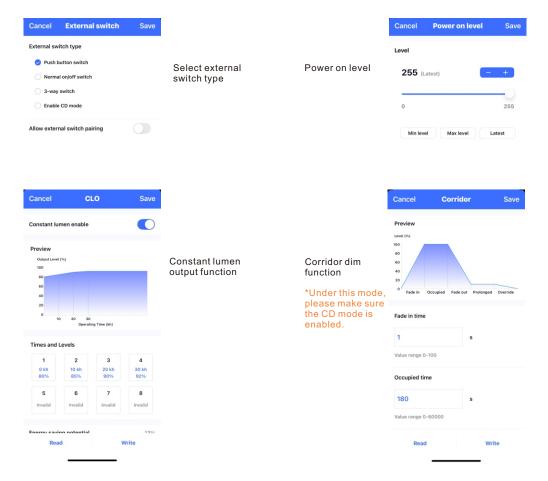

Step 5: After setting, please save the selected configuration via NFC and power on the device.




Touch the device with the back of the

2. Many functions can be configured by NFC.

3. You can create a default profile with the "+" button.

Kindly check your desired functions.

Function setting Via "SR NFC TOOL"

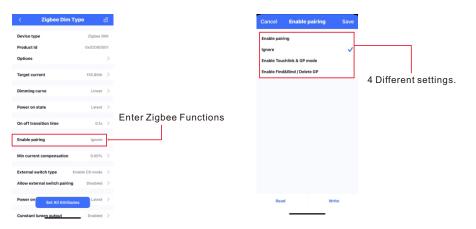

1) Enable pairing

- A. Enable the Zigbee NFC drivers enter the pairing mode and add it into the Zigbee network.
- B. Factory reset. Enable the configured Zigbee NFC driver into configuring mode.
- C. Besides, you can re-power the device 5 times to enable this section as well.

2) Ignore

A. Remember, once you need to write other parameters into the NFC driver, you should select this section, so as not to change the driver's state.

3) Enable Touchlink & GP mode

A. Select this section and write it into the Zigbee NFC driver, the driver will enter Touchlink mode and GP Mode.


Note: You can both have Touchlink and GP functions as long as you matched with Touchlink function first.

B. Besides, you can re-power the device 4 times to enable this section as well.


4) Enable Find&Bind / Delete GP

- A. Select this section and write it into the Zigbee NFC driver, the driver will enter Find&Bind mode, and it will delete previous GP bonding .
- B. Besides, you can re-power the device 3 times to enable this section as well.

Operating window

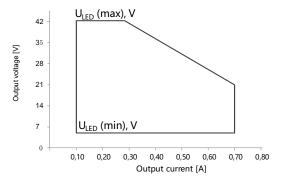


Dimming Curve

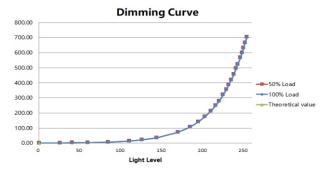


Note: Test data under 700mA gear

Driver Performance

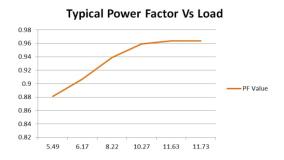

Note: Test data under 700mA gear


Driver Performance

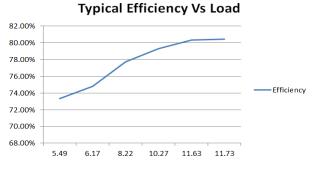

Note: Test data under 700mA gear

MCB Load Quantity

Module Number	lpeak	Twidth		D40	D.1.0			-					мсв		B40	D00	Das
			B10	B13	B16	B20	B25	C10	U13	U16	C20	U25	ווט	D13	טוט	D20	D25
SRP-ZG9105N-15CC100-700	3.96A	90µs	37	49	60	75	94	63	81	100	125	156	80	104	128	160	200
SRP-ZG9105N-15CCT100-700	3.96A	90µs	37	49	60	75	94	63	81	100	125	156	80	104	128	160	200

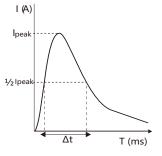

Note:

- 1. Those MCB parameters are based on ABB S200 series circuit breakers.
- For different brands and models of miniature circuit breakers, the quantity of drivers will have difference.
- Please do not exceed the above-mentioned quantity during on-site installation, and the specific load quantity shall be subject to on-site installation.
- 4.When the installation environment temperature of MCBs exceeds 30°C or when multiple MCBs are installed side by side, the number of mounted drives will be reduced, which requires recalculation.
- 5. Type C MCB's are strongly recommended to use with LED lighting

Update log

Date	Version	Update content	Update by
2025-7-7	V1.1	NFC Function Update	Romeo

Note: Subject to change without notice. Please contact us if you have any questions.