

With NFC Programming devices

Note

1) Do wiring according to the wiring diagram and power on the DALI system .

2) Recommend setting parameters without power-on the DALI devices .

2) Please make sure your mobile phone has NFC function and enable it .

Working with “SR NFC Tool” APP


Step 1: Download the APP (searching “SR NFC Tool” from App Store and Google Play) .
Then open the APP .




Download
"SR NFC
Tool"

- Note:**
1. Please Make sure that you have enabled NFC function with your mobile phone/ tablet .
 2. Please Make sure that the "NFC position" is matched.
 3. Please do not power on the device before setting.
 4. If you can't download "SR NFC Tool". Please contact with us.

Step 2: Add device, and name it as you wish.

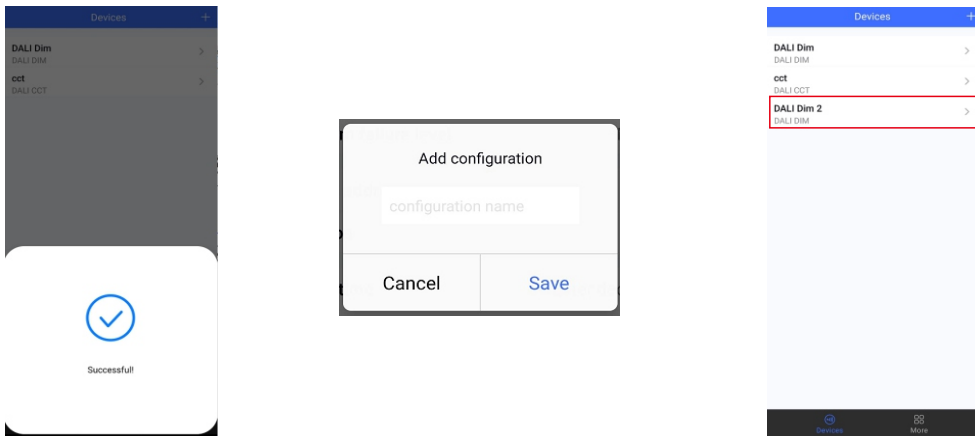


Step 3: Unlock device, enter parameters configuring page.

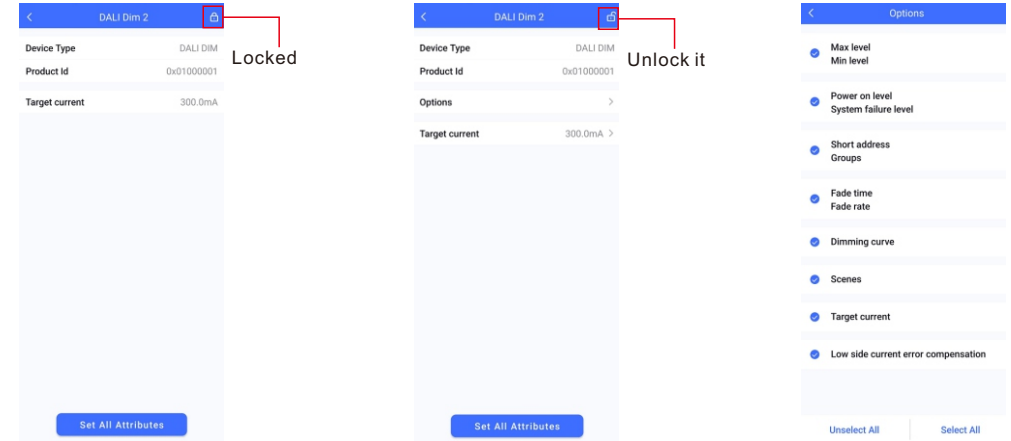

- Note:**
1. You have to unlock the device then do some settings
 2. Only when the corresponding function is selected, the function interface will be displayed.

Step 4: Few parameter interface, you can choose the setting based on your requirements.

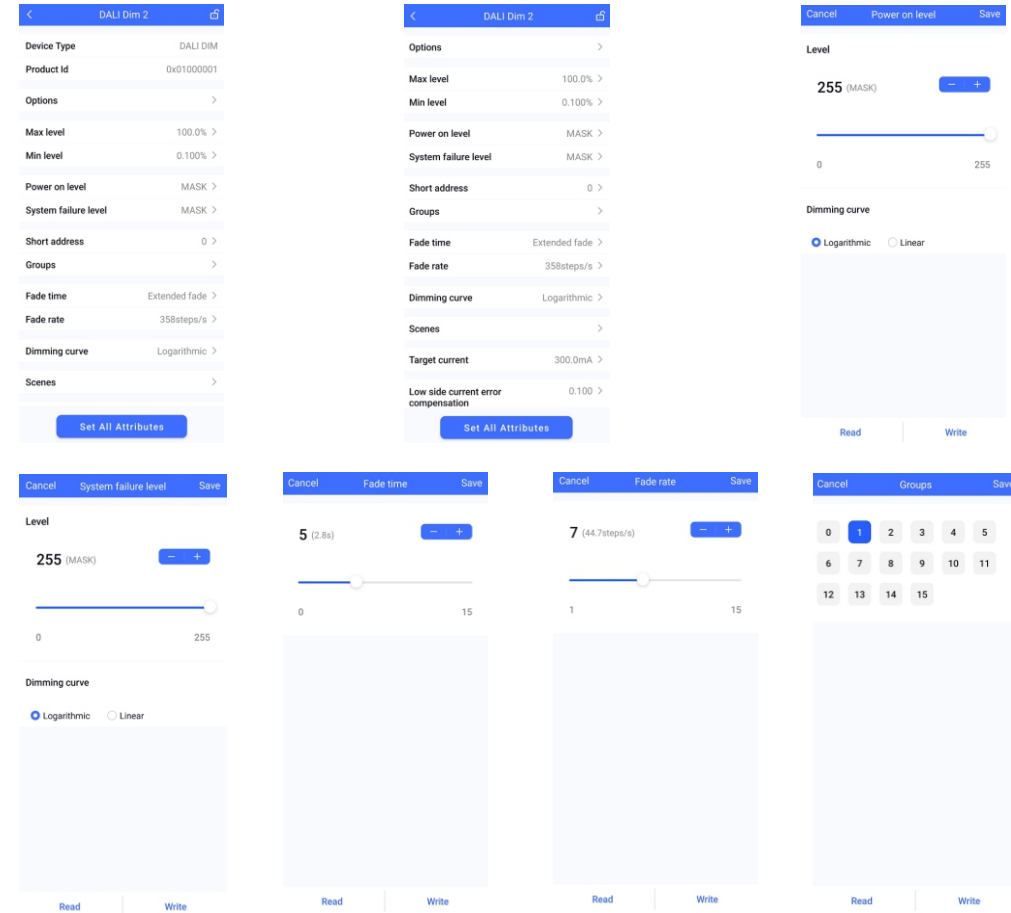


Step 5: After setting, please save the selected configuration via NFC and power on the device.



Tips

1. NFC function doesn't require any power driver.
2. Many functions can be configured by NFC. Kindly check your desired functions.
3. All of our DALI drivers are in the best performance within our DALI master/ gateway.

2. Enter CLO Setting homepage

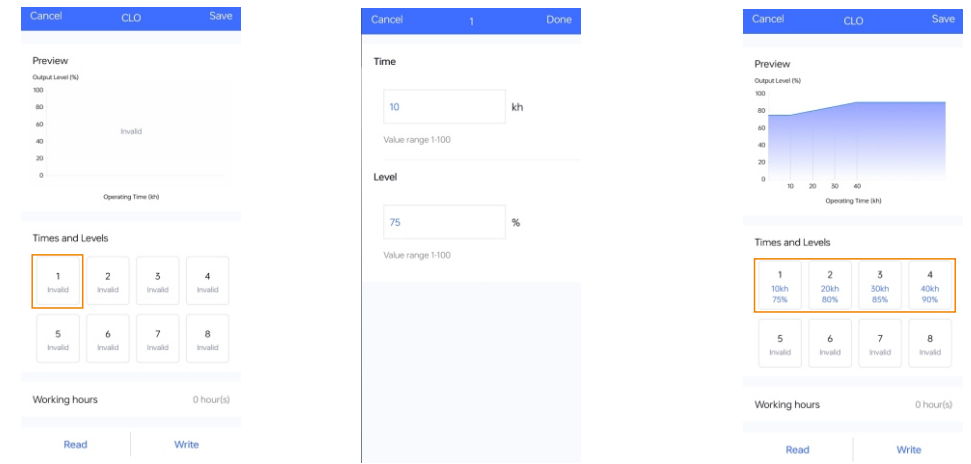

Enable CLO function

Click "1", and set its time and level


Set your desired time and levels.
Graphic display

Tips:

Working hours : Ability to calculate the working hours of a single driver.


CLO FUNCTION INSTRUCTION

1. Open APP, and Find the CLO function

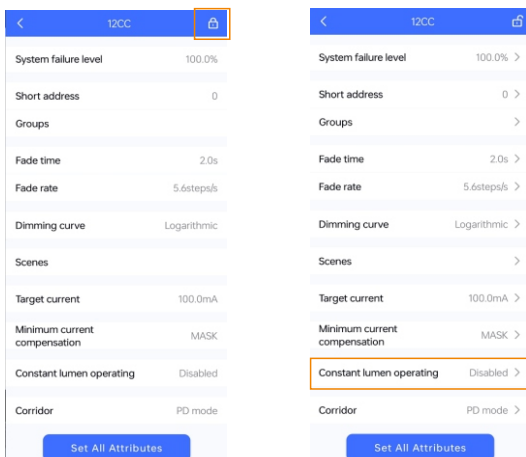


Read From the NFC Driver

Unlock it, and Click here to enter CLO settings

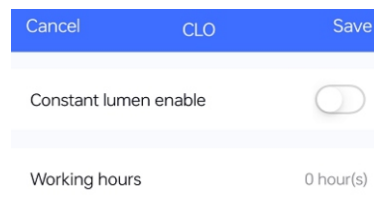

Enable or Disable CLO function

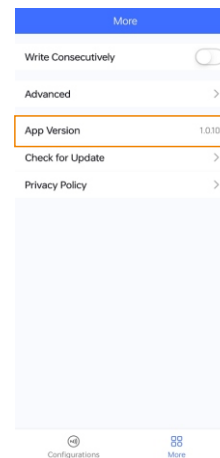


1. Please make sure your APP version is 1.0.10 or higher.
2. Please make sure NFC driver's firmware is available with CLO function.


Additional Remarks

Wiring Diagram

1. With DALI bus

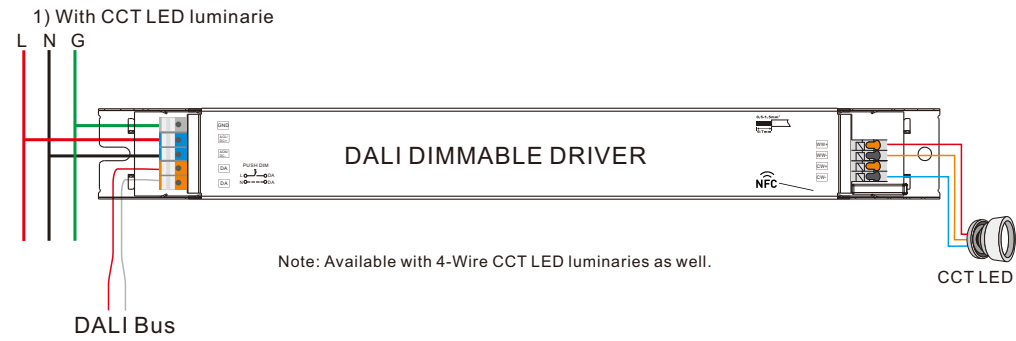

2. With PUSH dimmer

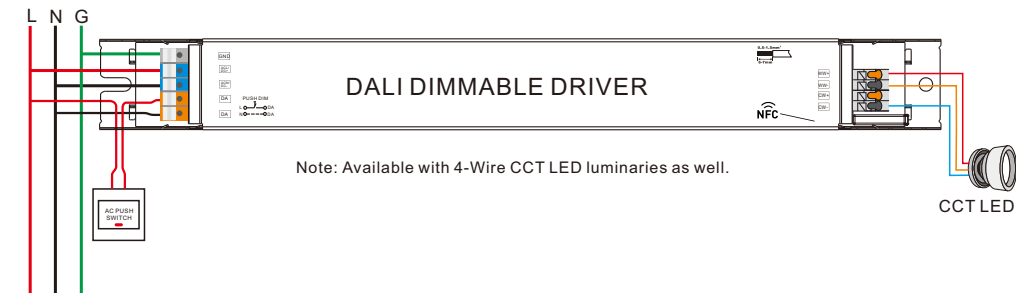

AC Push Function

- 1) Click the button to switch ON/OFF
- 2) Press and hold down the button to increase or decrease light intensity to desired level and release it, then repeat the operation to adjust light intensity to opposite direction. The dimming range is from 1% to 100%.
- 3) Double click the button to switch between brightness mode and color temperature mode.
- 4) Press and hold down the button to change color temperature under color temperature mode.

Product Dimension

