


# Wall mounted DMX512 Master


SR-2811(IT)

## Installation

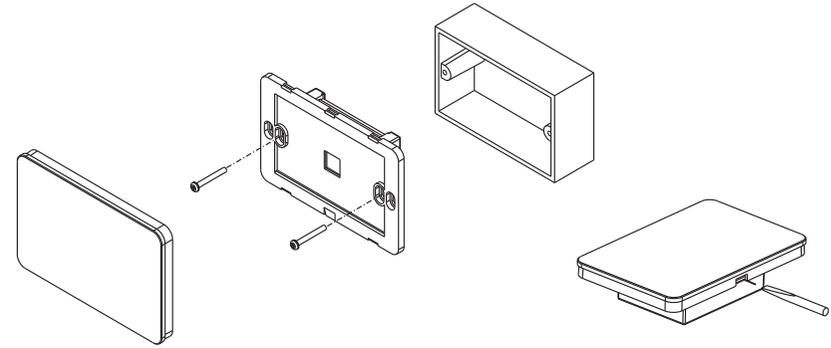


## Description of buttons

SR-2811 IT

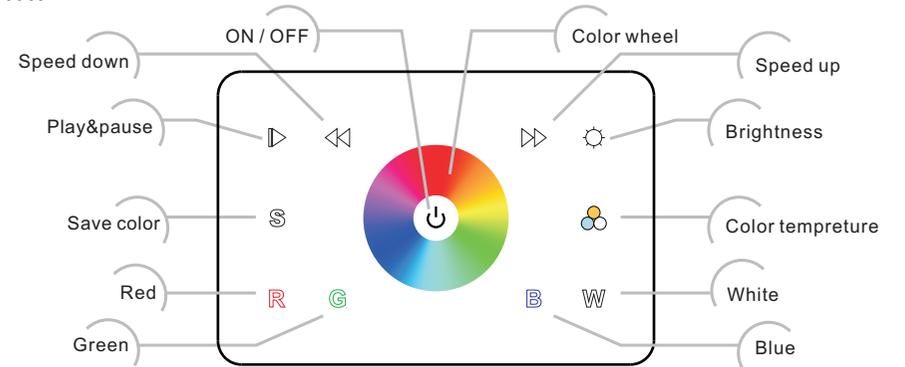

SR-2811 RF

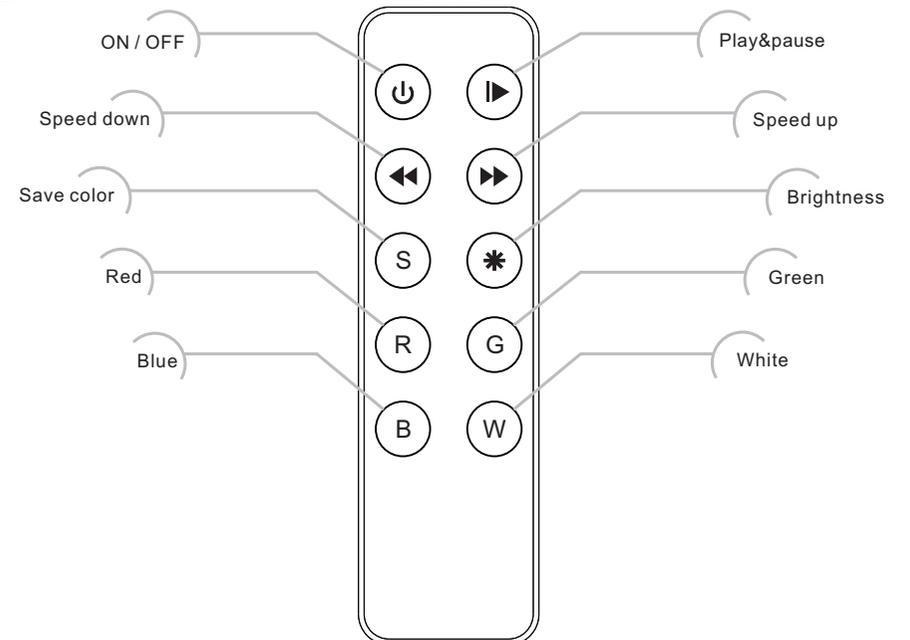

### Feature

- 1 zone
- Suitable for Italy and Australia Market
- Glass interface(White & Black)
- Save color and mode function
- Combination of DMX output & PWM Signal Control & RF Remote Control




## Parameter

Part No.	Input Voltage	Output	Size
SR-2811(IT)	12-24VDC	1.PWM Signal Current=4x4A Output Power=4x(48-96)W	120x80x29.2
		2.DMX Signal Output=DMX512 Signal Output Power=4x(96-288)W (According to different DMX decoder)	


Part No.	Operation Voltage	Operation Frequency	DIMENSIONS ø/h (mm)	Remarks
SR-2811RF	3VDC	434MHz/868MHz	39X136.5X10.7	Battery CR2025

## Product Size

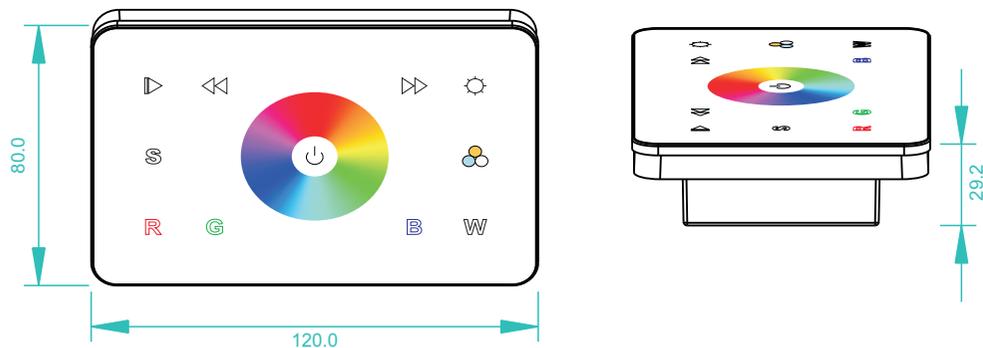


## Wiring diagram

### 1) PWM Signal

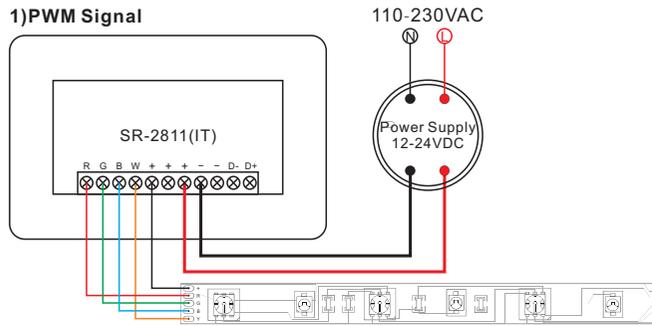

### 2) DMX512 Signal

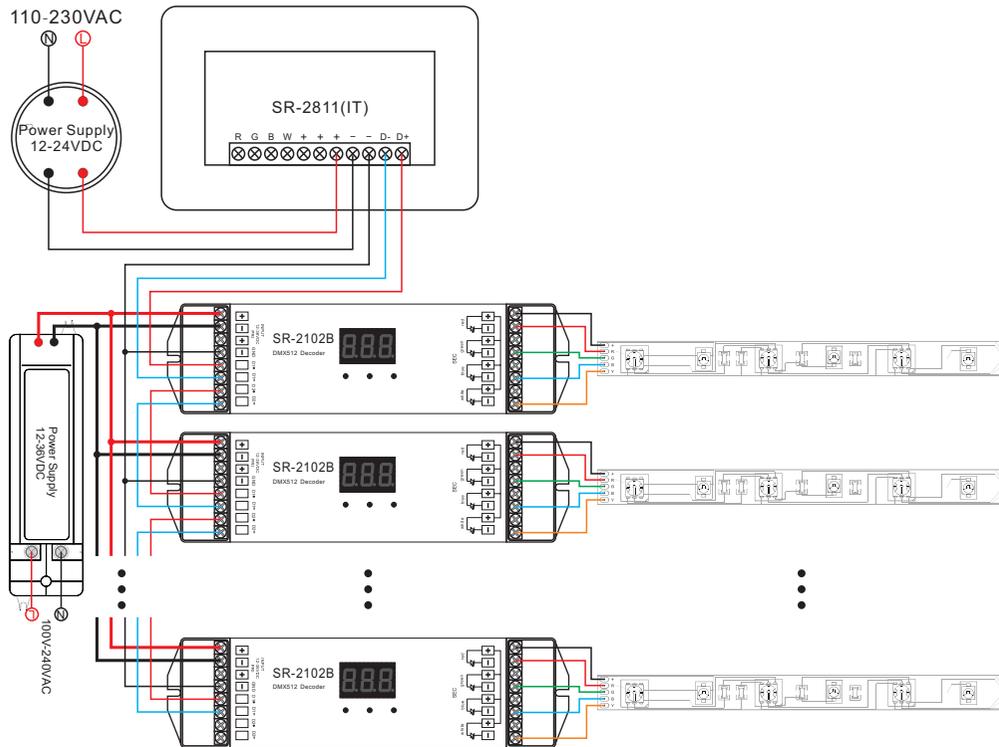

## Operation

- ▶ Play&pause button. There is only 1 build-in mode. When you touch ▶ button, it will run.
- ☀ Brightness ◀◀ Speed down ▶▶ Speed up
- Ⓢ Button can save the color from mode or save color when you touch color wheel.  
In "S" button, it saved "R/ G/ B" 3 colors in default. But with your operation, you can save another 3 colors replace those R/G/B colors.  
When you press ▶ this button, 1 build-in mode will run, if now you see a favorite mode, then you can press "S" button for 5 seconds until connected lighting flashes. Then it saved successfully.  
When you touch 🌈 color wheel, if you touch a favorite color on it, then you want to save it, then you press "S" button for 5 seconds until the connected lighting flashes. Then it saved successfully.

- 🌈 For Warm white, Natural white, Cool white changing.(Through the three RGB color mixing)
- 🌈 Touching wheels ⏻ Switch off and on, long press means default setting
- R G B W Short press means switch on and off for each channel. 1st Long press means brightness+, 2nd Long press means brightness—.

At the corner of the panel there is a signal light, Blue means on, Red means off

**Please set the connected DMX decoders' address to be only 001**  
**You can set any DMX address(same or different) from 001,005,007--037.**

### Learn Remote

After wiring according to wiring diagram,  
Push the learning button on the back of SR-2811 IT,  
Then push the remote controller SR-2811RF,  
(when the light flash means successfully learned)

## Safety & Warnings

- 1) The product shall be installed and serviced by a qualified person.
- 2) IP20.Please avoid the sun and rain. When installed outdoors, please ensure it is mounted in a water proof enclosure.
- 3) Always be sure to mount this unit in an area with proper ventilation to avoid overheating.
- 4) Please check if the output voltage of any LED power supplies used comply with the working voltage of the product.
- 5) Never connect any cables while power is on and always assure correct connections to avoid short circuits before switching on.
- 6) Please ensure that the cable is secured tightly in the connector
- 7) For update information please consult your supplier.

## Warranty Agreement

- 1) We provide lifelong technical assistance with this product:
  - 5-year warranty. We print date on every products, for example :1125 means year 2011,week 25.The warranty is for free repair or replacement and covers manufacturing faults only.
  - For faults beyond the 3-year warranty we reserve the right to charge for time and parts.
- 2) Limited Warranty
  - Any defects caused by wrong operation.
  - Any damages caused by unauthorized removal, maintenance, modifying, incorrect connection and replacement of chips.
  - Any damages due to transportation, vibration etc. after purchase.
  - Any damages caused by earthquake, fire, lightning, pollution and abnormal voltage.
  - Any damages caused by negligence, inappropriate storing at high temperatures and humidity or near harmful chemicals.
  - Product has been updated
- 3) Repair or replacement as provided under this warranty is the exclusive remedy to the customer.