40W DALI DT6 NFC Enabled LED Driver(Constant Current)



Important: Read All Instructions Prior to Installation

Function introduction



Product Data

Output	LED Channel	1
	DC Voltage	50-220V
	Current	80-400mA via NFC setting; Min.current gear lower to 0.1mA
	Current Accuracy	±3%@ full load
	Rated Power	Max. 40W
Input	Voltage Range	220-240VAC
	Frequency Range	50/60Hz
	Power Factor (Typ.)	> 0.95 @ 230VAC Full load
	Total Harmonic Distortion	THD ≤ 10% (@ full load / 230VAC)
	Efficiency (Typ.)	> 90% @ 230VAC full load
	AC Current (Typ.)	0.5A @ 230VAC
	Inrush Current (Typ.)	Max. 8.65A at 230VAC; 86µs duration
	Leakage Current	< 5mA/230VAC
	Standby Power Consumption	< 0.5W
	Anti Surge	L-N:2KV
Control	Dimming Interface	DALI Device Type 6 (DALI consumption < 2mA)/ AC Push
	Dimming Range	0.01%-100%@ Max current
	Dimming Method	Amplitude/CCR dimming
	Dimming Curve	Linear/ Logarithmic optional

Protection	Short Circuit	Yes, recovers automatically after fault condition is removed
	Over Current	Yes, recovers automatically after fault condition is removed
	Over Temperature	Yes, recovers automatically after temperature drop
Environment	Working Temp.	-25°C ~ +60°C
	Max. Case Temp.	Tc=90°C
	Working Humidity	10% ~ 95% RH non-condensing
	Storage Temp. & Humidity	-40°C ~ +80°C, 10% ~ 95% RH
Safety & EMC	Safety Standards	EN61347-1, EN61347-2-13
	Withstand Voltage	I/P-O/P: 3.75KVAC
	Isolation Resistance	I/P-O/P: 100M Ohms / 500VDC / 25°C / 70% RH
	EMC Emission	En55015, EN61000-3-2, EN61000-3-3
	EMC Immunity	En61547, EN61000-4-2,3,4,5,6,8,11
Others	MTBF	191350H, MIL-HDBK-217F @ 230VAC full load and 25°C ambient temperature
	Dimension	245x30x21mm (L*W*H)
	Warranty	5 Years

- In compliance with IEC 62386-101:2014, IEC 62386-102:2014, IEC 62386-207 Ed2
- Built-in DALI-2 interface, DALI DT6 device
- Dimmable LED driver with linear metal housing. Max. output power 40W
- 80-400mA current selectable via NFC program tool. Min.current gear lower to 0.1mA
- DALI Address/Group/Scene setting via NFC program tool
- For luminaires of protection class I and protection class II
- High power factor and efficiency. Non-SELV rated driver
- To switch and dim LED lighting luminaries
- Amplitude/CCR dimming, smooth and deep dimming
- Compatible with universal DALI masters that support DT6 commands
- DALI-251/252/253 Enabled, DALI data inside
- IP20 rating, suitable for indoor LED lighting applications
- 5 years warranty

Safety & Warnings

- DO NOT install with power applied to the device.
- DO NOT expose the device to moisture.

Operation

With DALI master

1. DALI Address

1 DALI address for 1 channel output are assigned by DALI Master controller automatically, please refer to user manuals of compatible DALI Masters for specific operations.

With NFC Programming devices

Note

- 1) Do wiring according to the wiring diagram and power on the DALI system.
- 2) Recommend setting parameters without power-on the DALI devices .
- 2) Please make sure your mobile phone has NFC function and enable it .

Working with "SR NFC Tool" APP


Step 1: Download the APP (searching "SR NFC Tool" from App Store and Google Play) . Then open the APP .



- Note: 1. Please Make sure that you have enabled NFC function with your mobile phone/ tablet .
 - 2. Please Make sure that the "NFC position" is matched.
 - 3. Please do not power on the device before setting.
 - 4. If you can't download "SR NFC Tool". Please contact with us.

Step 2: Add device, and name it as you wish.



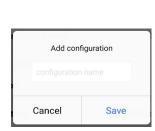




Step 3: Unlock device, enter parameters configuring page.




- Note: 1. You have to unlock the device then do some settings
 - 2. Only when the corresponding function is selected, the function interface will be displayed.

Step 4: Few parameter interface, you can choose the setting based on your requirements.

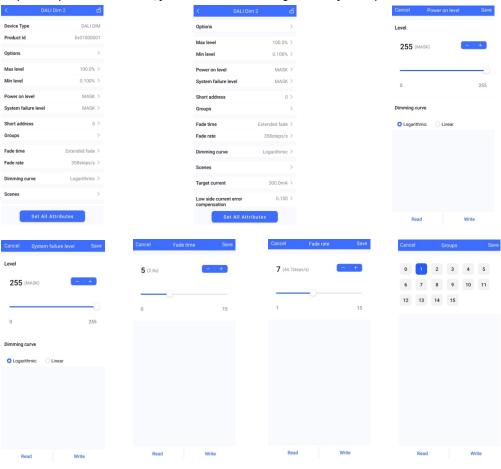

Step 5: After setting, please save the selected configuration via NFC and power on the device.

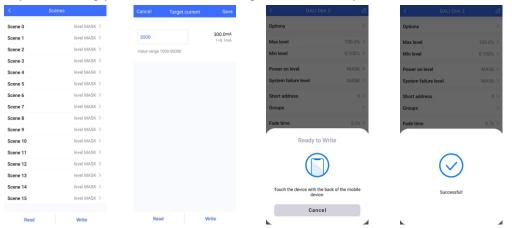


Tips

- 1. NFC function doesn't require any power driver.
- 2. Many functions can be configured by NFC. Kindly check your desired functions.
- 3. All of our DALI drivers are in the best performance within our DALI master/ gateway.


CLO AND CORRIDOR DIM(CD) FUNCTION INSTRUCTION

1. Open APP, and Find the CLO/CD functions

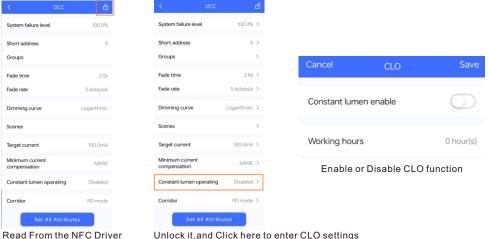

Unlock it, and Click here to enter CLO settings

2.Enter CLO Setting homepage

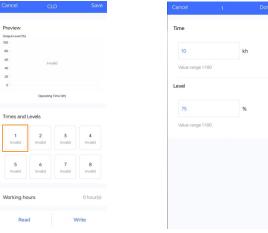





Enable CLO function


Click "1".and set its time and level

Set your desired time and levels. Graphic display

Tips:

Working hours: Ability to calculate the working hours of a single driver.

3.Corridor dim(CD) function

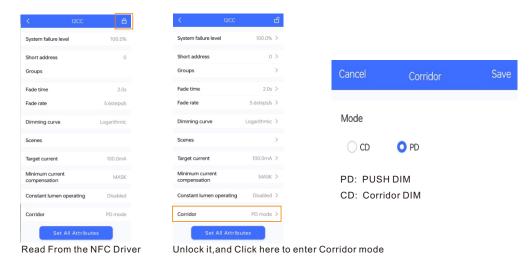

4.Enter CD Setting homepage







Enter CD mode

Set your desired time and levels. Graphic display

Tips:

- 1. You should select either CD mode or PD mode, but not both.
- 2. Under CD mode, you can realize it with normal (3rd party) AC sensor.
- 3. Default mode: PD mode.


Additional Remarks



- 1. Please make sure your APP version is 1.0.10 or higher.
- 2. Please make sure NFC driver's firmware is available with CLO / CD functions.

Wiring Diagram

- 1. With DALI bus
- 1) With single color LED luminaire

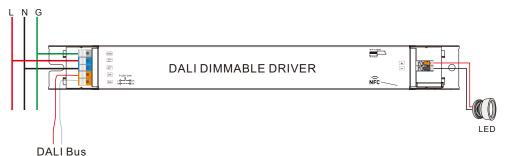

2. With PUSH dimmer



AC Push Function

- 1) Click the button to switch ON/OFF
- 2) Press and hold down the button to increase or decrease light intensity to desired level and release it, then repeat the operation to adjust light intensity to opposite direction. The dimming range is from 1% to 100%.

Product Dimension

