



Group & Scene Control Single Color DALI Touch Panel

09.230WU.04170



Important: Read All Instructions Prior to Installation


Function introduction

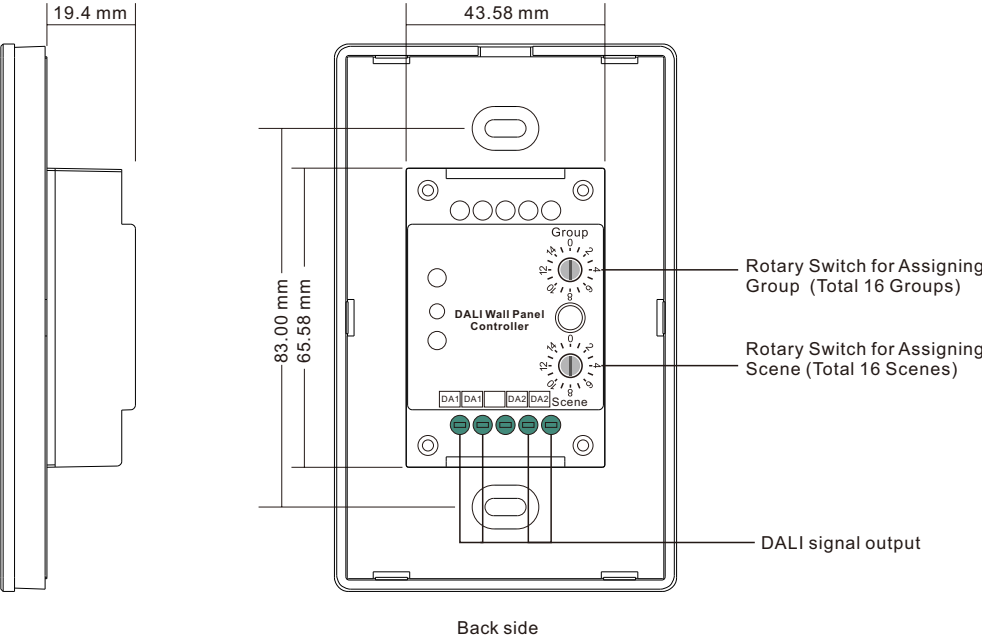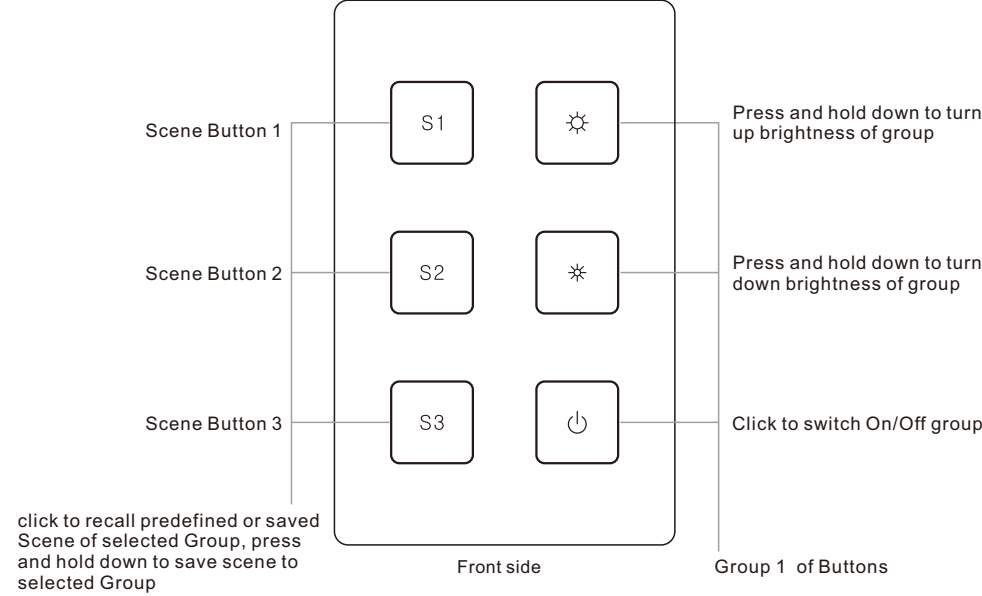

Product Data

Output	DALI signal
Power Supply	Supply By DALI Bus
Operation Current	4mA
Operating temperature	0-40°C
Relative humidity	8% to 80%
Dimensions	75x120x29.1mm
Waterproof grade	IP20


Installation

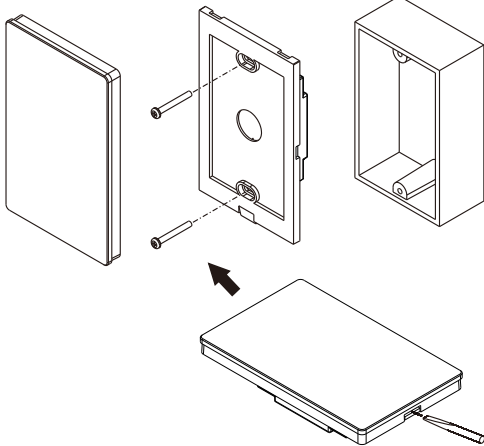

Safety & Warnings

- DO NOT install with power applied to device.
- DO NOT expose the device to moisture.

Wiring diagram

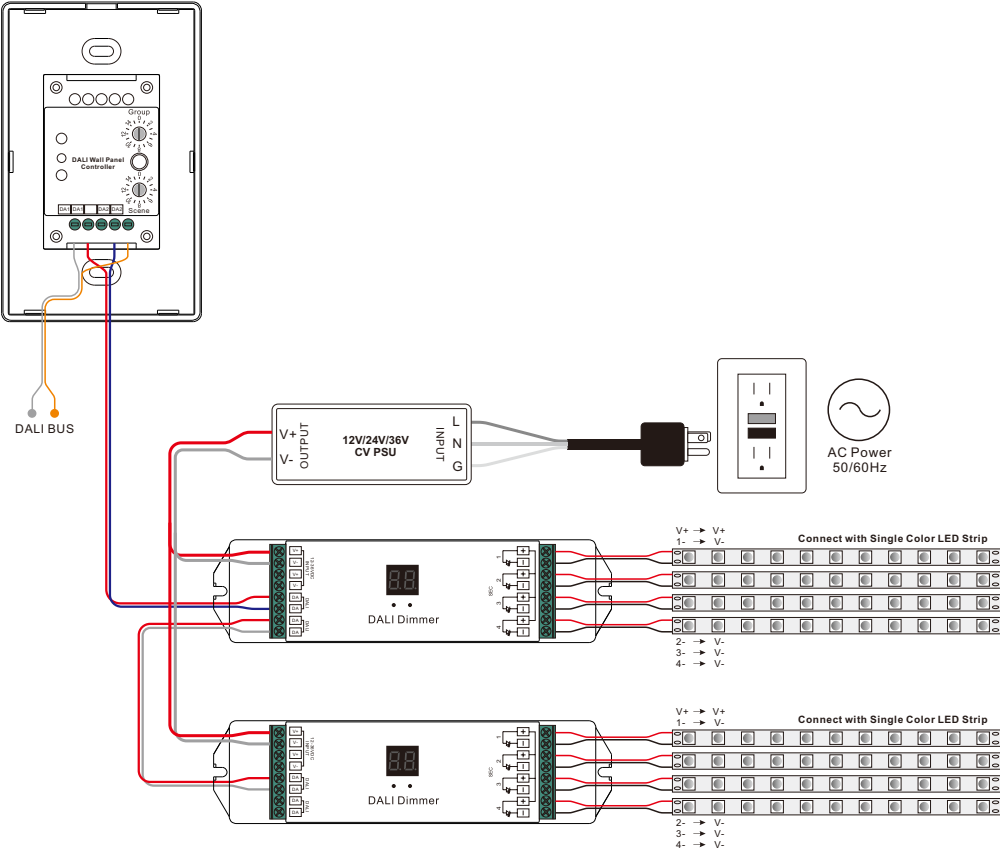

Operation

1. Do wiring according to connection diagram correctly.
2. Set starting Group number via rotary switch on the back: (0-15 selectable)
- This DALI touch panel controller enables dimming commands to be sent to One Group of devices on the DALI circuit by one Group of buttons. A rotary switch on the back is used to select Group you would like to control and set the starting Group number, and total 16 Groups (0-15) can be selected.
 - When the rotary switch arrow position is at 0, the DALI panel controls all DALI devices on the circuit via broadcast.
 - When the rotary switch arrow position is at X except 0 (1-15), the DALI panel controls DALI Group X-1. For example: Rotary switch arrow at 1, it controls devices in DALI Group 0. Rotary switch arrow at 15, it controls devices in DALI Group 14.
- Note: all DALI slaves on the circuit shall be assigned to one or more DALI groups by DALI master first.**

Please refer to the detailed Group setting table as follows:



Rotary Switch Position	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
DALI Group Selected	Broadcast	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14

3. Set starting Scene number via rotary switch on the back: (0-15 selectable)
- This DALI touch panel controller enables Scene selection commands for up to 3 Scenes to be sent to the DALI circuit by 3 Scene buttons S1, S2, S3. A rotary switch on the back is used to select Scenes you would like to control and set the starting scene number, and total 16 Scenes (0-15) can be selected.
 - When the rotary switch arrow position is at X (0-15), Scene button S1 controls Scene X, S2 controls Scene X+1, and S3 controls Scene X+2.

For example: Rotary switch arrow at 0, button S1 controls Scene 0, S2 controls Scene 1, and S3 controls Scene 2. Rotary switch arrow at 15, button S1 controls Scene 15, S2 controls Scene 0, and S3 controls Scene 1.

Please refer to the detailed Scene setting table as follows:

Rotary Switch Position	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
Scene assigned to S1	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
Scene assigned to S2	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	0
Scene assigned to S3	2	3	4	5	6	7	8	9	10	11	12	13	14	15	0	1

4. Save Scenes
- Turn on the DALI panel →
- Press and hold down button  or  to select a scene→
- Press and hold down button S1/S2/S3 until LED indicator on the panel flash, which indicates the scene is saved successfully.
- Note: The saved scenes will cover the predefined ones.**