


4 Channels DALI DT8 Dimmer with Built-in Master Function

70040035-ZW



Important: Read All Instructions Prior to Installation

Function introduction

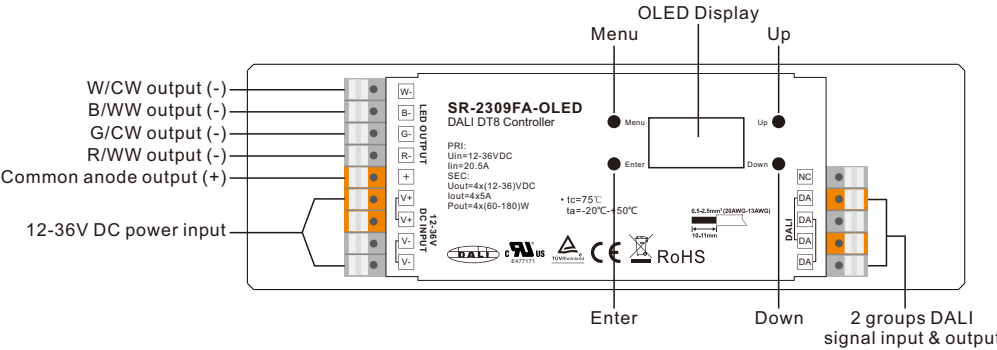

Product Data

No.	Input Voltage	Output Current	Output Power	DALI Consumption	Remarks	Connector Current Rating	Size(LxWxH)	Ambient Temperature
1	12-36VDC	4x5A	4x(60-180)W	2mA	Constant voltage	Max. 20A	170x53.4x28mm	-20°C ~ +50°C
2	12-48VDC	4x350mA	4x(4.2-16.8)W	2mA	Constant current		170x53.4x28mm	
3	12-48VDC	4x700mA	4x(8.4-33.6)W	2mA	Constant current		170x53.4x28mm	

- In compliance with IEC 62386-101:2014, IEC 62386-102:2014, IEC 62386-207 Ed2, IEC 62386-209:2011
- Built-in DALI-2 interface, DALI DT8 device
- DALI DT8 dimmer, 4 channels PWM output, built-in DALI master function
- OLED display interface , easy & fast installation
- No DALI master required for configuration
- Cost & time saving than DALI USB configuration
- DT8 colour types all in one: XY, Tc, RGBW, RGBTCXY (multicolor) settable
- Each device is controlled via a single DALI address
- Enable to address and group the DT8 device
- Enable to predefine & recall 16 scenes for the DT8 device
- 250Hz-30KHz PWM frequency settable, smooth and fine DT8 colour control
- Enables to set a min. level for dimming between this level to max. level
- Enable to set output level and manual control (stand-alone)
- Enables to set fade time, fade rate, power on level, system failure level
- Compatible with universal DALI masters that supports DT8 commands.

Safety & Warnings

- DO NOT install with power applied to device.
- DO NOT expose the device to moisture.

Commissioning and Configuration

Menu Select

After wiring the dimmer correctly, power on it, the OLED will show ,



A-00 means the DALI address assigned to the device by factory default is 00, and Tc colour means factory default colour type is Tc. Then click “Menu” button to enter Menu Select interface, keep clicking “Down” buttons, you will get commissioning and configuration options one by one on the OLED display as follows:

- 1.Set Addr: assign DALI a address to the device
- 2.Set Group: assign the device to one or more DALI groups
- 3.Save Scene: configure up to 16 scenes (0–15) to the device
- 4.Go to Scene: recall the configured 16 scenes
- 5.Set Out level: set out level of the device manually
- 6.Set Time Rate: set fade time and fade rate
- 7.Set Power Min: set a minimum level, the dimmer can not be dimmed below this value
- 8.Set Power on: set a level as the value after power is restored
- 9.Set Sys fail: set a level as the value in the event of failure of the DALI power supply
- 10.Colour type: set DT8 colour type, Tc, XY, RGBW settable

When set colour type as XY, next options are as follows:

- 11.Set Zero Addr: set the starting DALI address as 0/1
- 12.Set PWM freq: set the output PWM frequency
- 13.Reset: factory reset the dimmer

When set colour type as RGBW, next options are as follows:

- 11.Control type: set control type as Extension or Normal, which means the LED light output power ratio
- 12.Output type: set output type as Standard or Special
- 13.Set Zero Addr: set the starting DALI address as 0/1
- 14.Set PWM freq: set the output PWM frequency
- 15.Reset: factory reset the dimmer

When set colour type as Tc, next options are as follows:

- 11.Set wm cl ph: set a physical lower limit and a physical upper limit for colour temperature of the device
- 12.Set wm cl tc: set colour temperature range in which the colour temperature of the device can be changed.

The colour temperature range is restricted to the physical upper and lower limits.

13.Set Zero Addr: set the starting DALI address as 0/1

14.Set PWM freq: set the output PWM frequency

15.Reset: factory reset the dimmer

When set colour type as RGBTCXY, this is multicolor device type, there are 3 active options XY, TC, RGBW, whatever active option is selected, the user can change the active option using a DALI application controller, the next menus available for XY, TC, RGBW are the same as colour types XY, TC, RGBW correspondingly.


Colour type

Before commissioning and configuration, please first set DT8 colour type for the device according to the LED light to be controlled and colour types that your DALI master controller supports:

1)Click “Down” button on Menu select interface to select “10. Colour type”



2)Click “Enter” button to enter set colour type interface, click “Enter” button move the cursor to the digit after “Type:”, then click “Up” and “Down” buttons to select 0/1/2/3, then click “Enter” button to confirm setting. If Type 3 is selected, click “Enter” button to move the cursor to the digit after “Active:”, then click “Up” and “Down” buttons to select 0/1/2, then click “Enter” button to confirm setting, factory default is 1 (Tc).




Note:

- When set colour type as XY, the device will control RGB LED light.
- When set colour type as Tc, the device will control tunable white LED light.
- When set colour type as RGBW, the device will control RGB (number of channel as 3)/RGBW (number of channel as 4) LED lights.

Control Type (For colour type RGBW only)


1)Once set colour type as RGBW, click “Menu” button to return to Menu select interface, click “Down” button to select “11. control type”.



2)Click “Enter” button to enter control type interface, then click “Enter” button to move the cursor to the letter after “control:”, click “Up” and “Down” to select Nor/Ext, Nor means normalized control type, Ext means

extended control type, then click “Enter” to confirm setting. If Ext is selected, click “Enter” to move the cursor to the digit after “Power ratio:”, then click “Up” and “Down” to set the value of Power ratio from 0-160.

Nor means this function is not enabled. Ext means this function is enabled, you can set the power ratio from 0-160.



Note:

- By factory default, the power ratio is not enabled.

Normalized: Power ratio is fixed to 32(100%). Extended: Enables to adjust power ratio.

Under Extended control type:

Set power ratio to 128(400%): each channel's max. output will be 5A, and total max. output will be 4*5A=20A.

Set power ratio to 32(100%): the total output of all channels combined will be 5A.

For example, R+G+B+W=5A(1.25A per channel) if all four channels are turned on, channel R+G+B=5A(1.67A per channel) if only channels R, G and B are turned on, channel R+G=5A(1.25A per channel) if only channels R and G are turned on, and channel R=5A if only channel R is turned on.


Output Type (For colour type RGBW only)

1) The functionality of output type is to set how to control the R, G, B, W channels, there are two options available, “Standard” and “Special”.

Navigate to the “12. output type” menu, click “Enter” button to enter output type interface, then click “Enter” button to move the cursor to the letter after “out:”, click “Up” and “Down” to select Standard/Special, factory default setting is “Standard”.

“Standard” means DALI standard control logic, when this option is selected, the user can not turn off RGBW lights by setting the value of R, G, B and W channels to 0, if the user set the value of R, G, B and W channels all to 0, all 4 channels will turn on. If the user would like to turn off the RGBW lights under this option, they should set the direct arc power value of the lights to 0 or directly send off command to the lights.


“Special” means manufacturer specific control logic, when this option is selected, the user can turn off RGBW lights by setting the value of R, G, B and W channels to 0. When using a DALI RGBW touch panel with R, G, B, W four-channel separate control buttons, the user should select “special” option.



Set zero Addr

This configuration is to set the starting DALI address according to different DALI systems:


3)Click “Menu” button to return to Menu select interface, click “Down” button to select “set zero Addr”



4)Click “Enter” button to enter set zero address interface, then click “Enter” button to move the cursor to the digit “0” after “zero Addr:”, click “Up” and “Down” to select 0/1, then click “Enter” to confirm setting and the cursor will move to “zero Addr:”.

0 means starting DALI address is 00, and DALI address range will be 00-63.

1 means starting DALI address is 01, and DALI address range will be 01-64.



Note:


- By factory default, the starting DALI address is 00.

Set Addr

1)Once colour type is set, click “Menu” button to return to Menu select interface, click “Up” and “Down” buttons to select “1. set Addr”



2)Click “Enter” button to enter set address interface. Click “Enter” button move the cursor to the 1st digit after “Addr 1:”, then click “Up” and “Down” buttons to select a digit, then click “Enter” to confirm and move the cursor to the 2nd digit and set it, then click “Enter” button to confirm setting, and the cursor will be moved to Addr 1.



Note:

DALI address is settable from 00-63-FF, and factory default DALI address for the device is 00. FF means no address assigned.

Set Group

1)Click “Menu” button to return to Menu select interface, click “Down” button to select “2. set Group”



2)Click “Enter” button to enter set group interface, the device can be assigned to total 16 groups (G0-G15). Click “Enter” to move the cursor to the digit after “G0:”, click “Up” and “Down” to select 0/1, 0 means the device does not belong to this group, and 1 means it belongs to the group, then click “Enter” button to confirm setting and move the cursor to “G0”.

3)Click “Down” button to move the cursor to G1-G15 and set other groups.



Note:

The device can be assigned to total 16 groups (G0-G15). By factory default it does not belong to any of the groups.

Set Scene

1)Click “Menu” button to return to Menu select interface, click “Down” buttons to select “3. save Scene”




2)Click “Enter” button to enter save scene interface, we can configure total 16 scenes (Scene0-Scene15) to the device, click “Up” and “Down” buttons to select from Scene0-Scene15, then click “Enter” to enter scene configuration interface. Different colour types have different parameters, please refer to the detailed scene parameter setting for different colour types as follows:

Colour type	Scene setting
XY	<div>Two side-by-side screenshots of the '3.save Scene' interface for XY colour type. The left screenshot shows 'Scene0: 000', 'Scene1: 000', and 'Scene2: 000'. The right screenshot shows 'Scene0: 000', 'Scene1: 000', and 'Scene2: 000'. Both screenshots include 'Menu', 'Up', and 'Down' buttons.</div> <p>1)“Power” means the light intensity, “X coord” means X coordinate value, “Y coord” means Y coordinate value.</p> <p>2)First is to set intensity. Click “Enter” button to move the cursor to the 1st digit after “Power:”, then click “Up” and “Down” button to select a digit, then click “Enter” to confirm and move the cursor to 2nd digit and set, then 3rd digit, once the power is set, click “Enter” button to confirm and the cursor will be moved to “Power:”.</p> <p>3)Set XY coordinate value. After setting the intensity, click “Down” button to move the cursor to “X coord:” to set X coordinate value. Click “Enter” button to move the cursor to the 1st “F” after “X coord:”, then click “Down” button to change it to 0.99, the cursor will be on 1st “9”, then click “Down” to select a digit from 0-9 and click “Enter” to confirm and move the cursor to 2nd “9” and set, then click “Enter” to confirm setting and the cursor will be moved to “X coord:”. Click “Down” button to move the cursor to “Y coord:” to set Y coordinate value.</p> <p>4)After setting Scene0, click “Enter” button to return to previous interface, then click “Down” button to select and set “Scene1” to “Scene15”.</p> <p>Note:</p> <ul style="list-style-type: none">Intensity settable value range: 000 (0%) -254 (100%) -255 (MASK), factory default is 255 (MASK), which means the device will retain its current intensity when relevant scene is recalled.XY coordinate settable value range: 0.01-0.99-FF, factory default is FF, which means RGB channels will retain their current XY coordinate values when relevant scene is recalled.
Tc	<div>Two side-by-side screenshots of the '3.save Scene' interface for Tc colour type. The left screenshot shows 'Scene0: 000', 'Scene1: 000', and 'Scene2: 000'. The right screenshot shows 'Scene0: 000', 'Scene1: 000', and 'Scene2: 000'. Both screenshots include 'Menu', 'Up', and 'Down' buttons.</div> <p>1)“Power” means the light intensity and “TC” means the colour temperature.</p> <p>2)First is to set intensity. Click “Enter” button to move the cursor to the 1st digit after “Power:”, then click “Up” and “Down” button to select a digit, then click “Enter” to confirm and move the cursor to 2nd digit and set, then 3rd digit, once the power is set, click “Enter” button to confirm and the cursor will be moved to “Power:”.</p> <p>3)After setting the intensity, click “Down” button to move the cursor to “TC:” to set colour temperature. Click “Enter” button to move the cursor to the 1st “F” after “TC:”, then click “Down” button to change the value to “10000K”, the cursor will be on 1st digit “1”, click “Up” and “Down” buttons to select a digit, then click “Enter” to confirm and move the cursor to 2nd digit and set, then 3rd, 4th and 5th, once the “TC” is set, click “Enter” button to confirm and the cursor will be moved to “TC:”.</p>

Tc	<p>4)After setting Scene0, click “Enter” button to return to previous interface, then click “Up” and “Down” button to select and set “Scene1” to “Scene15”.</p> <p>Note:</p> <ul style="list-style-type: none">• Intensity settable value range: 000 (0%) -254 (100%) -255 (MASK), factory default is 255 (MASK), which means the device will retain its current intensity when relevant scene is recalled.• Colour temperature settable value range: 01600K-10000K-FFFFFK, factory default is FFFFFK, which means the device will retain its current colour temperature when relevant scene is recalled.
RGBW	<div><div><div>● Menu</div><div>3.save Scene Scene0: Scene1 Scene2</div><div>● Up</div><div>● Down</div></div><div><div>● Menu</div><div>3.save Scene Power:255 R:255 G:255 B:255 W:255</div><div>● Up</div><div>● Down</div></div></div> <p>1)“Power” means the light intensity and “R, G, B, W” mean the value of each channel.</p> <p>2)First is to set intensity. Click “Enter” button to move the cursor to the 1st digit after “Power:”, then click “Up” and “Down” button to select a digit, then click “Enter” to confirm and move the cursor to 2nd digit and set, then 3rd digit, once the power is set, click “Enter” button to confirm and the cursor will be moved to “Power:”.</p> <p>3)After setting the intensity, click “Down” button to move the cursor to “R:” to set red colour value. Click “Enter” button to move the cursor to the 1st digit after “R:”, then click “Up” and “Down” button to select a digit, then click “Enter” to confirm and move the cursor to 2nd digit and set, then 3rd, once the “R” is set, click “Enter” button to confirm and the cursor will be moved to “R:”. Then click “Down” button to move the cursor to “G:” and set, then “B:”, then “W:”.</p> <p>4)After setting Scene0, click “Enter” button to return to previous interface, then click “Up” and “Down” button to select and set “Scene1” to “Scene15”.</p> <p>Note:</p> <ul style="list-style-type: none">• Light intensity settable value range: 000 (0%) -254 (100%) -255 (MASK), factory default is 255 (MASK), which means the device will retain its current intensity when relevant scene is recalled.• R, G, B, W value settable value range: 000 (0%) -255 (100%), factory default is 255 (100%).

Go to Scene

1)Click “Menu” button to return to Menu select interface, click “Up” and “Down” buttons to select “4. go to Scene”




2)Click “Enter” button to enter get Scene interface, we can recall total 16 configured scenes (scene0-scene15):

3)Total 16 scenes can be recalled (Scene0 – Scene15), click “Up” and “Down” buttons to select from Scene0 to Scene15, then click “Enter” button to confirm and recall corresponding scene and the recalled scene details will be showed on the display.



Set Out Level

1)This configuration is to set out level of the device manually. Click “Menu” button to return to Menu select interface, click “Up” and “Down” buttons to select “5. set Out level”



3)Click “Enter” button to enter set Out level interface, different colour types have different parameters, please refer to the detailed parameter setting for different colour types as follows:

Colour type	Out level setting
XY	<div><div><div>● Menu</div><div>5.set Out level Power:254 X coord: 0.32 Y coord: 0.32</div><div>● Up</div><div>● Down</div></div><div>● Enter</div></div> <p>1)“Power” means the light intensity, “X coord” means X coordinate value, “Y coord” means Y coordinate value.</p> <p>2)First is to set intensity. Click “Enter” button to move the cursor to the 1st digit after “Power:”, then click “Up” and “Down” button to select a digit, then click “Enter” to confirm and move the cursor to 2nd digit and set, then 3rd digit, once the power is set, click “Enter” button to confirm and the cursor will be moved to “Power:”.</p> <p>3)Set XY coordinate value. After setting the intensity, click “Down” button to move the cursor to “X coord:” to set X coordinate value. Click “Enter” button to move the cursor to the 1st digit after “0.”, then click “Up” and “Down” button to select a digit, then click “Enter” to confirm and move the cursor to the 2nd digit and click “Up” and “Down” button to select a digit and click “Enter” to confirm setting and the cursor will be moved to “X coord:”. Click “Down” button to move the cursor to “Y coord:” to set Y coordinate value.</p> <p>Note:</p> <ul style="list-style-type: none">• Intensity settable value range: 000 (0%) -254 (100%), factory default is 254 (100%), which means the device will retain its current intensity when relevant scene is recalled.• XY coordinate settable value range: 0.01-0.99, factory default is X=0.32, Y=0.32.

● Menu

5.set Out level
Power:254
TC:04098K

Up ●

● Enter

Down ●

1)“Power” means the light intensity and “TC” means the colour temperature.

2)First is to set intensity. Click “Enter” button to move the cursor to the 1st digit after “Power:”, then click “Up” and “Down” button to select a digit, then click “Enter” to confirm and move the cursor to 2nd digit and set, then 3rd digit, once the power is set, click “Enter” button to confirm and the cursor will be moved to “Power:”.

3)After setting the intensity, click “Down” button to move the cursor to “TC:” to set colour temperature. Click “Enter” button to move the cursor to the 1st digit after “TC:”, then click “Up” and “Down” button to select a digit, then click “Enter” to confirm and move the cursor to 2nd digit and set, then 3rd, 4th and 5th, once the “TC” is set, click “Enter” button to confirm and the cursor will be moved to “TC:”.

Note:

- Intensity settable value range: 000 (0%) -254 (100%), factory default is 254 (100%).
- Colour temperature settable value range: 01600K-10000K, factory default is 4098K.

● Menu

5.set Out level
Power:254
R:254 G:254
B:254 W:254

Up ●

● Enter

Down ●

1)“Power” means the light intensity and “R, G, B, W” mean the value of each channel.

2)First is to set intensity. Click “Enter” button to move the cursor to the 1st digit after “Power:”, then click “Up” and “Down” button to select a digit, then click “Enter” to confirm and move the cursor to 2nd digit and set, then 3rd digit, once the power is set, click “Enter” button to confirm and the cursor will be moved to “Power:”.

3)After setting the intensity, click “Down” button to move the cursor to “R:” to set red colour value. Click “Enter” button to move the cursor to the 1st digit after “R:”, then click “Up” and “Down” button to select a digit, then click “Enter” to confirm and move the cursor to 2nd digit and set, then 3rd, once the “R” is set, click “Enter” button to confirm and the cursor will be moved to “R:”. Then click “Down” button to move the cursor to “G:” and set, then “B:”, then “W:”.

Note:

- Intensity settable value range: 000 (0%) -254 (100%), factory default is 254 (100%).
- R, G, B, W value settable value range: 000 (0%) -255 (100%), factory default is 254 (99.6%).

Set PWM freq

1)This configuration is to set PWM output frequency. Click “Menu” button to return to Menu select interface, click “Up” and “Down” buttons to select “13. set PWM freq”

● Menu

Menu Select
11.set Sys fall
12.set zero Addr
13.set PWM freq

Up ●

● Enter

Down ●

2)Click “Enter” button to enter set PWM frequency interface, then click “Enter” button to move the cursor to the digit “0” after “freq:”, click “Up” and “Down” to select from 00-11 (250Hz-30KHz), then click “Enter” to confirm setting and the cursor will move to “freq:”. Detailed PWM frequency setting are as follows:

Number	00	01	02	03	04	05	06	07	08	09	10	11
Frequency	250Hz	500Hz	1KHz	2KHz	3KHz	4KHz	5KHz	10KHz	15KHz	20KHz	25KHz	30KHz

● Menu

13.set PWM freq
freq: 00 250Hz

Up ●

● Enter

Down ●

● Menu

13.set PWM freq
freq: 11 30KHz

Up ●

● Enter

Down ●

Note:

- By factory default, the PWM output frequency is 00 (250Hz).

Set wm cl ph (for colour types Tconly)

This configuration is to set a physical lower limit and a physical upper limit for colour temperature of the device.

1)Once set colour type as Tc, click “Menu” button to return to Menu select interface, click “Up” and “Down” buttons to select “11. set wm cl ph”.

● Menu

Menu Select
9.set Sys fail
10.color type
11. set wm cl ph

Up ●

● Enter

Down ●

2)Click “Enter” button to enter set wm cl ph interface, “ph warm” is to set the physical lower limit for colour temperature and “ph cool” is to set the physical upper limit.

3)Click “Enter” button to move the cursor to the 1st digit after “ph warm:”, click “Up” and “Down” to select a digit, then click “Enter” to confirm and move the cursor to 2nd digit and set, then 3rd, 4th and 5th, once the “ph warm:” is set, click “Enter” button to confirm and the cursor will be moved to “ph warm:”. Then click “Down” button to move the cursor to “ph cool” and set.

● Menu

11. set wm cl ph
ph warm: 01600
ph cool: 01600

Up ●

● Enter

Down ●


Note:

- The physical lower and upper limits for the colour temperature settable value range: 01600-10000.
- Factory default value for Tc colour type: “ph warm” is 2702, “ph cool” is 6493.

Set wm cl tc (for colour types Tc only)


This configuration is to set colour temperature range in which the colour temperature of the device can be changed.

1)Once set colour type as Tc, click “Menu” button to return to Menu select interface, click “Up” and “Down” buttons to select “12. set wm cl tc”.



2)Click “Enter” button to enter set wm cl tc interface, “warmest” is to set the warmest colour temperature and “coolest” is to set the coolest colour temperature.

3)Click “Enter” button to move the cursor to the 1st digit after “warmest:”, click “Up” and “Down” to select a digit, then click “Enter” to confirm and move the cursor to 2nd digit and set, then 3rd, 4th and 5th, once the “warmest” is set, click “Enter” button to confirm and the cursor will be moved to “warmest:”. Then click “Down” button to move the cursor to “coolest:” and set.









Note:

- The colour temperature settable value range: 01600-10000. The value of warmest can not be lower than the physical lower limit, and the value of coolest can not be higher than the physical upper limit. The coolest value must be bigger than the warmest value.
- Factory default value for Tc colour type: “warmest” is 2702, “coolest” is 6493.

Setting DALI default parameters

The following DALI default parameters can be set:

DALI default parameters	Description
Fade time	<p>1)Click “Menu” button to return to Menu select interface, click “Up” and “Down” buttons to select “6. set Time Rate”</p>  <p>2)Click “Enter” button to enter set Fade time and Fade rate interface, then click “Enter” button to move the cursor to the 1st digit after “Fade time:”, click “Up” and “Down” to select a digit, then click “Enter” to confirm setting and move the cursor to 2nd digit and set, then click “Enter” to confirm and the cursor will be moved to “Fade time:”.</p>  <p>3)The selected value is set as the fade time in seconds. Value range: • 00–15 s</p> <p>Note: 00 s is the DALI default. 00 s is the fastest fade time, and 15 s is the slowest.</p>

Fade rate	<p>1)On set Time Rate interface, after setting the Fade time, click “Down” button to move the cursor to “Fade rate:”, then click “Enter” button to move the cursor to the 1st digit after “Fade rate:”, click “Up” and “Down” to select a digit, then click “Enter” to confirm and move the cursor to 2nd digit and set, then click “Enter” to confirm and the cursor will be moved to “Fade rate:”</p>  <p>2)The selected value is set as the dimming speed. It indicates by how many steps per second the intensity is changed. The Fade Rate is used with the DALI commands Brighten (Up) and Dim (Down). Value range: • 01–15 steps per second</p> <p>Note: 07 steps per second is the DALI default. 15 steps per second is the fastest fade rate, and 01 steps per second is the slowest.</p>
Minimum level	<p>1)Click “Menu” button to return to Menu select interface, click “Up” and “Down” buttons to select “7. set Power min”</p>  <p>2)Click “Enter” button to enter set Minimum level interface, click “Enter” to move the cursor to the 1st digit after “Power min:”, click “Up” and “Down” to select a digit, then</p>
Minimum level	<p>click “Enter” to confirm and move the cursor to 2nd digit and set, then 3rd digit, then click “Enter” button to move the cursor to “Power min:” and confirm setting.</p>  <p>3)The selected value is set as the minimum level for the control gear. This value cannot be fallen below during dimming/brightening. Value range: • 000 (0%)-250 (98.4%)</p> <p>Note: 000 (0%) is the factory default minimum level.</p>
Power On Level	<p>1)Click “Menu” button to return to Menu select interface, click “Up” and “Down” buttons to select “8. set Power on”</p>  <p>2)Click “Enter” button to enter set power on level interface, different colour types have different parameters to be set. The selected values are set as the values after power is restored. Power on level setting instructions for different colour types are as follows:</p>

<div>Power On Level</div>	<div>Set XY Colour Power On</div> <div> <div> <div>Menu</div> <div>8. set Power on Power:254 X coord: 0.32 Y coord: 0.32</div> <div>Up</div> </div> <div> <div>Enter</div> <div></div> <div>Down</div> </div> </div> <p>1)“Power” means the light intensity, “X coord” means X coordinate value, “Y coord” means Y coordinate value.</p> <p>2)First is to set intensity. Click “Enter” button to move the cursor to the 1st digit after “Power:”, then click “Up” and “Down” button to select a digit, then click “Enter” to confirm and move the cursor to 2nd digit and set, then 3rd digit, once the power is set, click “Enter” button to confirm and the cursor will be moved to “Power:”.</p> <p>3)Set XY coordinate value. After setting the intensity, click “Down” button to move the cursor to “X coord:” to set X coordinate value. Click “Enter” button to move the cursor to the 1st digit after “0.”, then click “Up” and “Down” button to select a digit, then click “Enter” to confirm and move the cursor to the 2nd digit and set, then click “Enter” to confirm setting and the cursor will be moved to “X coord:”. Click “Down” button to move the cursor to “Y coord:” to set Y coordinate value.</p> <p>Note:</p> <ul style="list-style-type: none"> Intensity settable value range: 000 (0%) -254 (100%), factory default is 254 (100%). XY coordinate settable value range: 0.01-0.99, factory default is X=0.32, Y=0.32. <div>Set Tc Colour Power On</div> <div> <div> <div>Menu</div> <div>8. set Power on Power:254 TC:04098K</div> <div>Up</div> </div> <div> <div>Enter</div> <div></div> <div>Down</div> </div> </div> <p>1)“Power” means the light intensity and “TC” means the colour temperature.</p> <p>2)First is to set intensity. Click “Enter” button to move the cursor to the 1st digit after “Power:”, then click “Up” and “Down” button to select a digit, then click “Enter” to confirm and move the cursor to 2nd digit and set, then 3rd digit, once the power is set, click “Enter” button to confirm and the cursor will be moved to “Power:”.</p> <p>3)After setting the intensity, click “Down” button to move the cursor to “TC:” to set colour temperature. Click “Enter” button to move the cursor to the 1st digit after “TC:”, then click “Up” and “Down” button to select a digit, then click “Enter” to confirm and move the cursor to 2nd digit and set, then 3rd, 4th and 5th, once the “TC” is set, click “Enter” button to confirm and the cursor will be moved to “TC:”.</p> <p>Note:</p> <ul style="list-style-type: none"> Intensity settable value range: 000 (0%) -254 (100%), factory default is 254 (100%). Colour temperature settable value range: 01600K-10000K, factory default is 4098K. <div>Set RGBW Colour Power On</div> <div> <div> <div>Menu</div> <div>8. set Power on Power:254 R:254 G:254 B:254 W:254</div> <div>Up</div> </div> <div> <div>Enter</div> <div></div> <div>Down</div> </div> </div> <p>1)“Power” means the light intensity and “R, G, B, W” mean the value of each channel.</p> <p>2)First is to set intensity. Click “Enter” button to move the cursor to the 1st digit after “Power:”, then click “Up” and “Down” button to select a digit, then click “Enter” to confirm and move the cursor to 2nd digit and set, then 3rd digit, once the power is set, click “Enter” button to confirm and the cursor will be moved to “Power:”.</p>
	<div>Power On Level</div> <p>3)After setting the intensity, click “Down” button to move the cursor to “R:” to set red colour value. Click “Enter” button to move the cursor to the 1st digit after “R:”, then click “Up” and “Down” button to select a digit, then click “Enter” to confirm and move the cursor to 2nd digit and set, then 3rd, once the “R” is set, click “Enter” button to confirm and the cursor will be moved to “R:”. Then click “Down” button to move the cursor to “G:” and set, then “B:”, then “W:”.</p> <p>Note:</p> <ul style="list-style-type: none"> Intensity settable value range: 000 (0%) -254 (100%), factory default is 254 (100%). R, G, B, W value settable value range: 000 (0%) -255 (100%), factory default is 254 (99.6%).
	<div>System Failure Level</div> <p>1)Click “Menu” button to return to Menu select interface, click “Up” and “Down” buttons to select “9. set Sys fail”</p> <div> <div> <div>Menu</div> <div>Menu Select 7.set Power min 8.set Power on 9. set Sys fail</div> <div>Up</div> </div> <div> <div>Enter</div> <div></div> <div>Down</div> </div> </div> <p>2)Click “Enter” button to enter set system failure level interface, different colour types have different parameters to be set. The selected values are set as the values in the event of failure of the DALI power supply. System failure level setting instructions for different colour types are as follows:</p> <div>Set XY Colour System Failure</div> <div> <div> <div>Menu</div> <div>9. set Sys fail Power:254 X coord: 0.32 Y coord: 0.32</div> <div>Up</div> </div> <div> <div>Enter</div> <div></div> <div>Down</div> </div> </div> <p>1)“Power” means the light intensity, “X coord” means X coordinate value, “Y coord” means Y coordinate value.</p> <p>2)First is to set intensity. Click “Enter” button to move the cursor to the 1st digit after “Power:”, then click “Up” and “Down” button to select a digit, then click “Enter” to confirm and move the cursor to 2nd digit and set, then 3rd digit, once the power is set, click “Enter” button to confirm and the cursor will be moved to “Power:”.</p> <p>3)Set XY coordinate value. After setting the intensity, click “Down” button to move the cursor to “X coord:” to set X coordinate value. Click “Enter” button to move the cursor to the 1st digit after “0.”, then click “Up” and “Down” button to select a digit, then click “Enter” to confirm and move the cursor to the 2nd digit and set, then click “Enter” to confirm setting and the cursor will be moved to “X coord:”. Click “Down” button to move the cursor to “Y coord:” to set Y coordinate value.</p> <p>Note:</p> <ul style="list-style-type: none"> Intensity settable value range: 000 (0%) -254 (100%), factory default is 254 (100%). XY coordinate settable value range: 0.01-0.99, factory default is X=0.32, Y=0.32. <div>Set Tc Colour System Failure</div> <div> <div> <div>Menu</div> <div>9. set Sys fail Power:254 TC:04098K</div> <div>Up</div> </div> <div> <div>Enter</div> <div></div> <div>Down</div> </div> </div> <p>1)“Power” means the light intensity and “TC” means the colour temperature.</p>

System Failure Level

2)First is to set intensity. Click “Enter” button to move the cursor to the 1st digit after “Power:”, then click “Up” and “Down” button to select a digit, then click “Enter” to confirm and move the cursor to 2nd digit and set, then 3rd digit, once the power is set, click “Enter” button to confirm and the cursor will be moved to “Power:”.

3)After setting the intensity, click “Down” button to move the cursor to “TC:” to set colour temperature. Click “Enter” button to move the cursor to the 1st digit after “TC:”, then click “Up” and “Down” button to select a digit, then click “Enter” to confirm and move the cursor to 2nd digit and set, then 3rd, 4th and 5th, once the “TC” is set, click “Enter” button to confirm and the cursor will be moved to “TC:”.

Set RGBW Colour System Failure

● Menu

9. set Sys fail

● Up

● Enter

Power:254
R:254 G:254
B:254 W:254

● Down

1)“Power” means the light intensity and “R, G, B, W” mean the value of each channel.

2)First is to set intensity. Click “Enter” button to move the cursor to the 1st digit after “Power:”, then click “Up” and “Down” button to select a digit, then click “Enter” to confirm and move the cursor to 2nd digit and set, then 3rd digit, once the power is set, click “Enter” button to confirm and the cursor will be moved to “Power:”.

3)After setting the intensity, click “Down” button to move the cursor to “R:” to set red colour value. Click “Enter” button to move the cursor to the 1st digit after “R:”, then click “Up” and “Down” button to select a digit, then click “Enter” to confirm and move the cursor to 2nd digit and set, then 3rd, once the “R” is set, click “Enter” button to confirm and the cursor will be moved to “R:”. Then click “Down” button to move the cursor to “G:” and set, then “B:”, then “W:”.

Note:

- Intensity settable value range: 000 (0%) -254 (100%), factory default is 254 (100%).
- R, G, B, W value settable value range: 000 (0%) -255 (100%), factory default is 254 (99.6%).

Reset

1)This setting is to factory reset the device. Click “Menu” button to return to Menu select interface, click “Up” and “Down” buttons to select “Reset”

● Menu Menu Select
13.set zero Addr
14.set PWM freq
● Enter 15.Reset ● Down

2)Click “Enter” button to enter factory reset interface, click “Up” and “Down” button to move the cursor from “Abort” to “OK”, “Abort” means cancelling the reset, “OK” means confirming the reset, then click “Enter” button to confirm the reset, then the display will flash “Restoring to default setting” and restart which means the reset is successful.

● Menu Resume to default setting? ● Up

● Enter Abort ok ● Down

● Menu Resume to default setting? ● Up

● Enter ● Down

Wiring Diagram

The diagram shows two identical wiring setups for the SR-2309FA-OLED DALI DT8 Controller. Each setup includes a DALI Master connected to the controller's DALI interface. The controller's DC input is connected to a 12V/24V/36V CV PSU. The LED output is connected to either an RGBW LED Strip or a CCT LED Strip. The wiring is color-coded: W- (blue) to W+ (red), B- (green) to B+ (yellow), G- (blue) to G+ (red), R- (green) to R+ (yellow), and V+ (red) to V- (blue). The controller's specifications are: PFM: 100-120/240VAC, 50/60Hz, 100mA; DIM: 100-120/240VAC, 50/60Hz, 100mA; DIM: 100-120/240VAC, 50/60Hz, 100mA; DIM: 100-120/240VAC, 50/60Hz, 100mA. The controller is RoHS compliant and has a temperature range of -20°C to +50°C.

Notes: 1) Please use 1.5mm² wire for DC input and LED output when total load of a controller is not over 10A (including 10A).
2) Please use 2.5mm² wire for DC input and LED output when total load of a controller is over 10A.

Product Dimension

The product dimensions are: 170 mm (length), 28 mm (height), and 53.4 mm (width).