

BLE to 0/1-10V Power Pack with 5A Relay & 12V Aux


Important: Read All Instructions Prior to Installation



Features

- Bluetooth to 0-10V signal converter, Bluetooth® mesh network
- Built-in 25mA 0-10V signal output, with 5A relay
- Built-in Sensor input, allow to using 3rd party sensor in logic signal to control the power pack/0-10V Load.
- Mesh network, which has a much longer control distance, transmits received signals to neighboring devices
- All devices on 0-10V line are broadcast controlled by SunSmart Commissioning tools
- Supporting Sunricher kinetic energy switches and EnOcean switches EWSSB and EWSDb
- UL listed, Category: PAZX (Management Equipment, Energy). UL 2043 Plenum Rated
- IPEX antenna
- Waterproof grade: IP20
- 5 years warranty

Product info

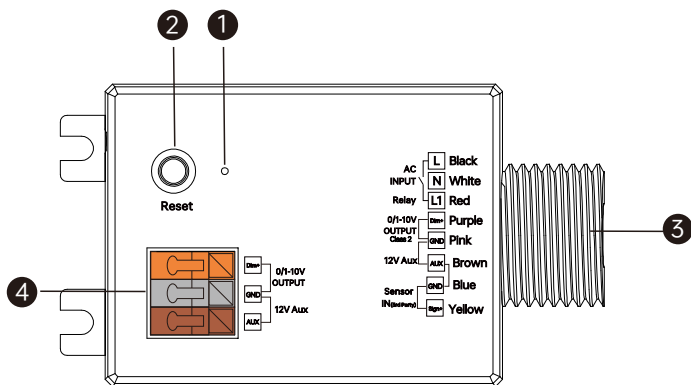

- 1 LED indicator:** Indicates different status of the device.
- 2 Reset Key:** Press and hold for more than 5 seconds and then release it after the indicator light flashes to help the device exit the mesh network.
- 3 Leads Output:** 18AWG for power line; 22AWG for dimming(signal)/AUX line
- 4 Push Terminals:** Quick connection to smart sensor.

Parameters


Input	Power	100-277VAC
	Signal	Bluetooth
Output, 0/1-10V	Current	Max. 25mA
	Switching Voltage	100-277VAC
Output, Relay	Current	Max. 5A
	Operating Temperature	0°C-+40°C
Environment	Relative Humidity	8% to 80%
Others	Size	78.2*43.4*31.7mm
Relay Ratings		
Load Type	100-277VAC Signal Converter with 5A Relay	
AC General Use	5A@120-277VAC	
Resistive	5A@120VAC, 5A@277VAC	
Capacitive	3A@120-277VAC	
Motor	0.5 HP@120VAC, 1 HP@250VAC	

Warning


- DO NOT expose the device to moisture.
- DO NOT install with power applied to device.
- Operating control; Type 1.B; Pollution degree: II; Rated impulse voltage: 4000V; Overcurrent protective device: 25A; “When being connected to 277VAC, the control should be connected to three-phase three-wire unearthed systems, and the rated impulse voltage is 4000V.”

Wiring


1) 0-10V Dimming Without Relay & Sensors

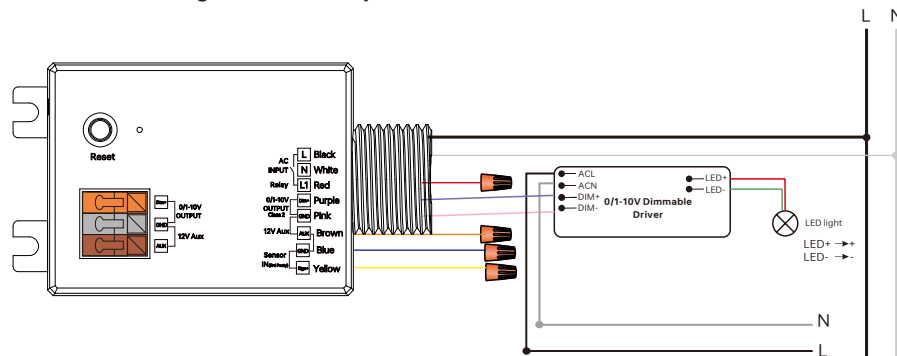


2) 0-10V Dimming With Relay

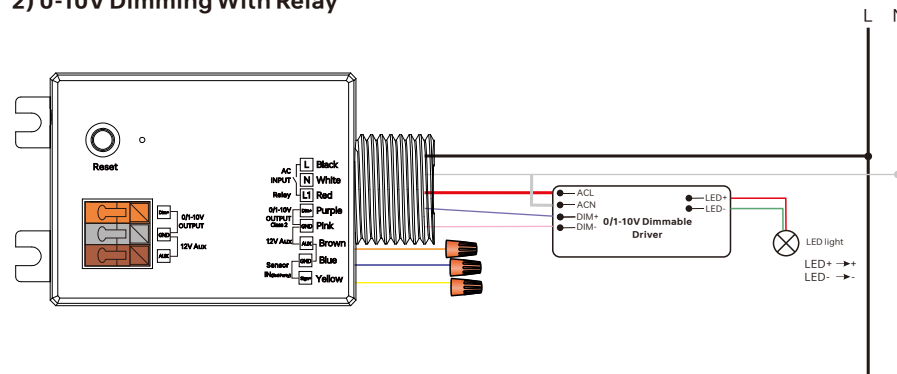


3) 0-10V Dimming With Relay and SILVAIR sensors

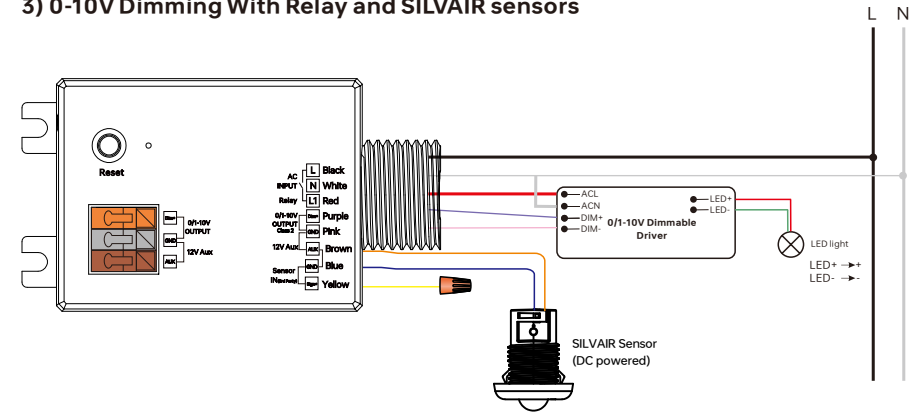


4) 0-10V Dimming With Relay and 3rd party sensors

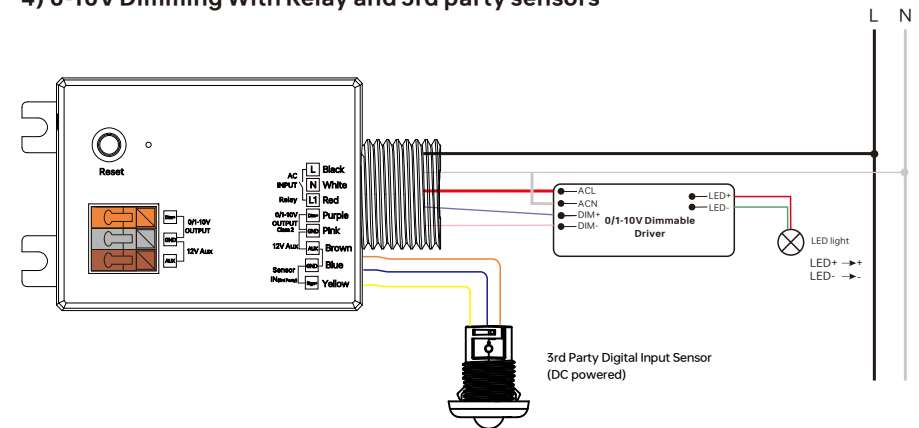

Installation

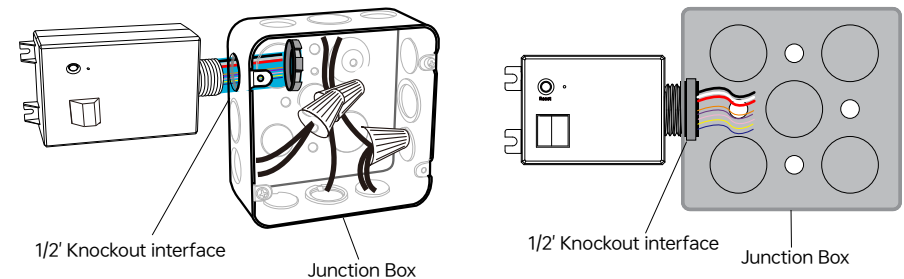

Dimension

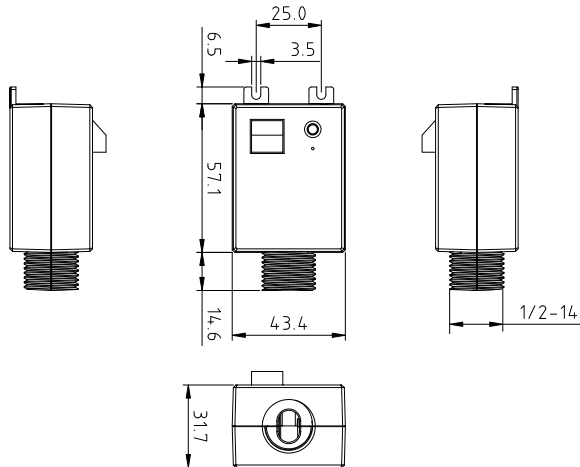

Operation

- Do wiring according to connection diagram.
- Kindly refer to “SunSmart Commissioning User Manual” for further pairing.
- Press and hold down the “Reset” button on the controller over 5 seconds until the indicator flashes , which means it has been reset.

Statement

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment offand on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The distance between user and products should be no less than 20cm.

Update Log

Date	Version	Update Content	Update by
2025-8-14	V1.0	Initial Version	Jesse

Subject to change without notice. Please contact us if you have any questions.